


SEC. II, DIV. A-1200
PARTS CATALOG
Revised April, 1958
Supersedes Nov., 1957

CLINTON

S E R I E S
A-1200
L O N G L I F E

BASIC
TYPE

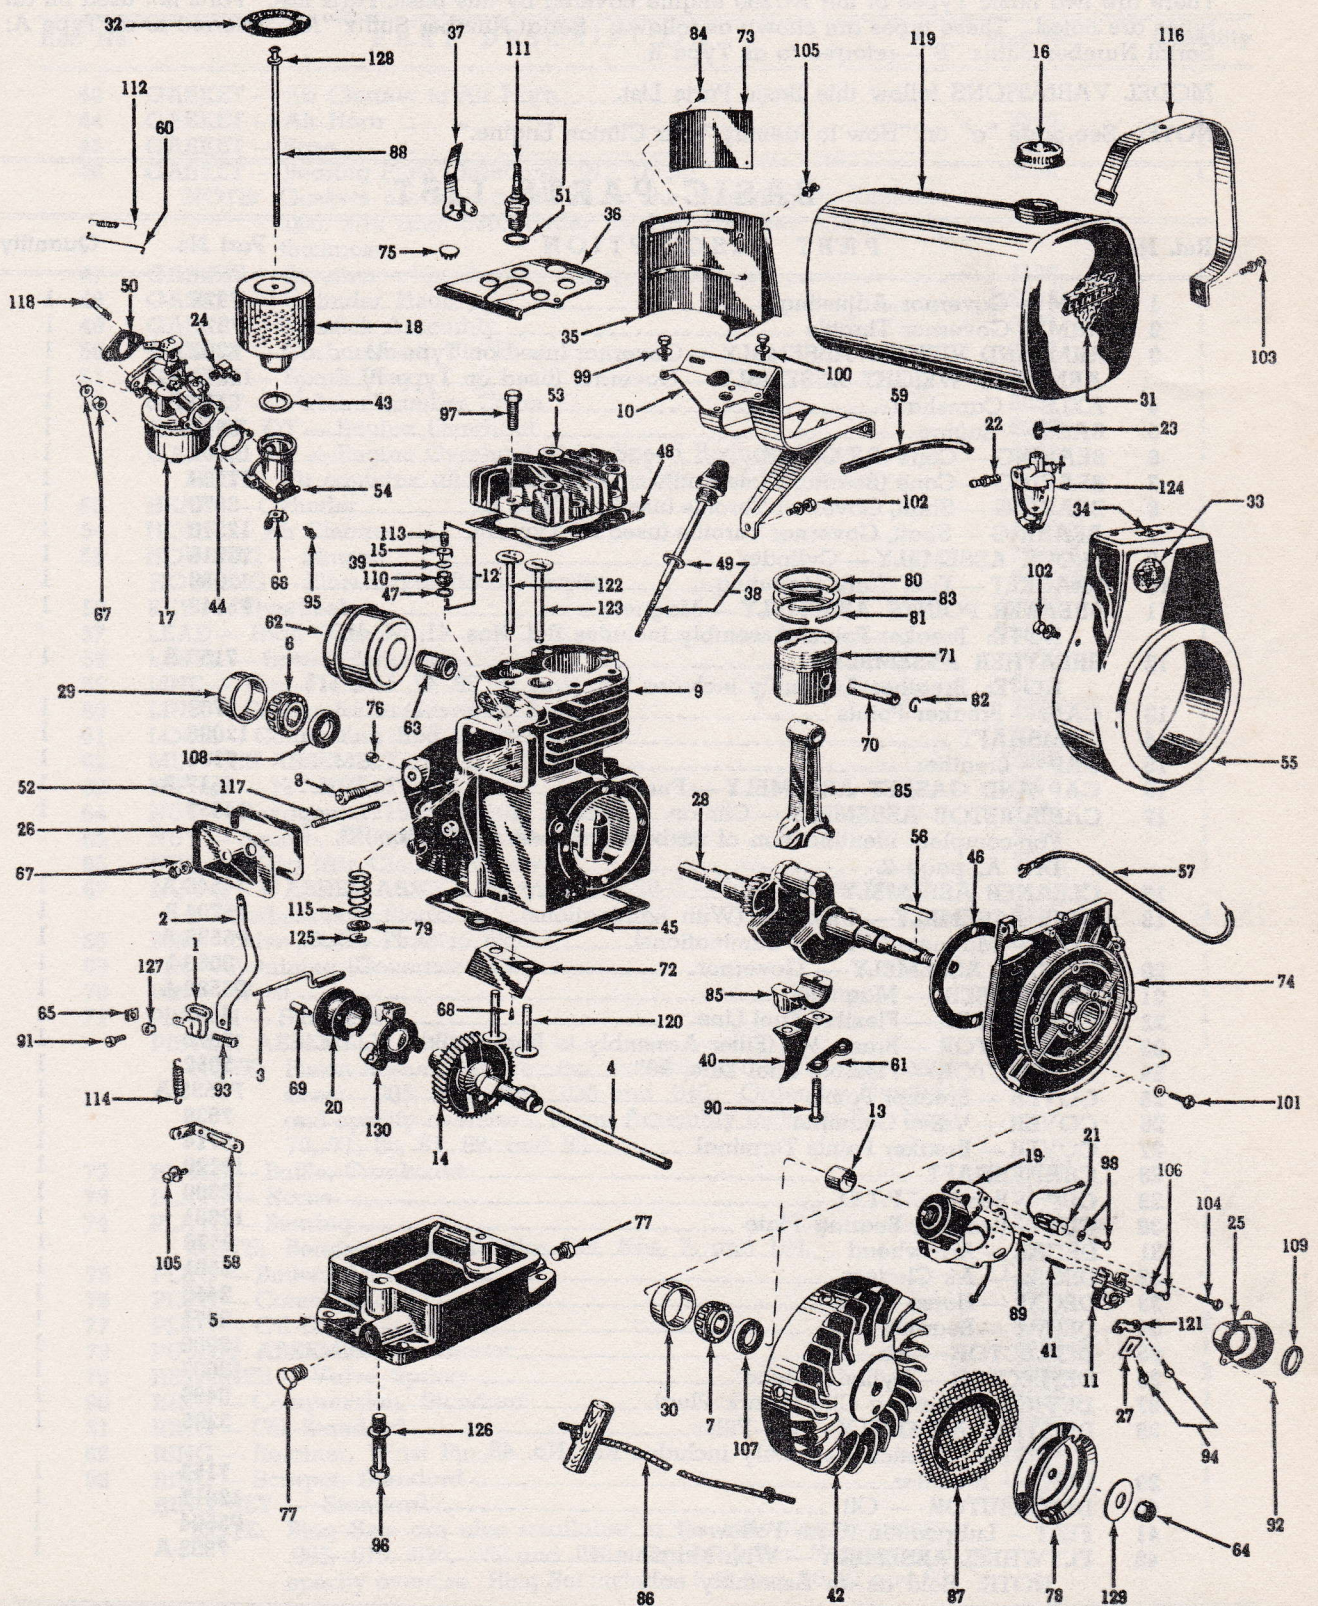

CLINTON

S E R I E S
A-1200
L O N G L I F E

**BASIC
TYPE**

SEC. II, DIV. A-1200
PARTS CATALOG
Revised April, 1958
Supersedes Nov., 1957

There are two Basic Types of the A-1200 engine covered by this Basic Parts List. Parts not used on all types are noted. These types are shown as follows: Serial Number Suffix "A"—referred to as Type A; Serial Number Suffix "B"—referred to as Type B.

MODEL VARIATIONS follow this Basic Parts List.

NOTE: See page "a" on "How to Identify Your Clinton Engine."

BASIC PARTS LIST

Ref. No.	PART DESCRIPTION	Part No.	Quantity
1	ARM — Governor Adjusting	7975	1
2	ARM — Governor Throttle	7977	1
3	ARM AND WEIGHT ASSEMBLY — Governor (used on Type A)	4203	1
	ARM AND WEIGHT ASSEMBLY — Governor (used on Type B)	12311-A	1
4	AXLE — Camshaft	3593-A	1
5	BASE — Engine	5040	1
6	BEARING — Cone (P.T.O. End)	12302	1
7	BEARING — Cone (Bearing Plate End)	12303	1
8	BEARING — Shaft, Governor Throttle (used on Type A)	3073	1
	BEARING — Shaft, Governor Throttle (used on Type B)	12310	1
9	BLOCK ASSEMBLY — Cylinder	12216	1
10	BRACKET — Fuel Tank Mounting	12059	1
11	BREAKER POINTS ASSEMBLY — Magneto	P5543	1
	NOTE: Breaker Points Assembly includes Ref. Nos. 41, 94, 106.		
12	BREATHER ASSEMBLY	7150-A	1
	NOTE: Breather Assembly includes Ref. Nos. 15, 39, 47, 110, 113.		
13	CAM — Breaker Points	5703	1
14	CAMSHAFT	12008	1
15	CAP — Breather	7151	1
16	CAP AND GASKET ASSEMBLY — Fuel	4517-A	1
17	CARBURETOR ASSEMBLY — Clinton	14053	1
	For complete identification of carburetors, refer to Section III, Div. A, page 2.		
18	CLEANER ASSEMBLY — Air	4546-A	1
19	COIL ASSEMBLY — Magneto (With Laminations)	P5704-B	1
	COIL — Magneto (Without Laminations)	P5593-A	1
20	COLLAR ASSEMBLY — Governor	3063-1	1
21	CONDENSER — Magneto	P5589-A	1
22	CONNECTOR — Flexible Fuel Line	5053	1
23	CONNECTOR — Brass, 1/8" (Filter Assembly to Fuel Tank)	3576	1
24	CONNECTOR — Flexible Fuel Line, 90°	5052	1
25	COVER — Breaker Points	P5595-A	1
26	COVER — Valve Chamber	7938	1
27	COVER — Breaker Points Terminal	5714	1
28	CRANKSHAFT	12120	1
29	CUP — Bearing, P.T.O.	12300	1
30	CUP — Bearing, Bearing Plate	12301	1
31	DECAL — Arrowhead	3579	1
32	DECAL — Air Cleaner	4561	1
33	DECAL — Horse Power	3453	1
34	DECAL — Bearing	3471	1
35	DEFLECTOR — Air	12006	1
36	DEFLECTOR — Cylinder Head	12005	1
37	DEVICE — Shorting Clip (Spark Plug)	3495	1
38	DIPSTICK ASSEMBLY — Oil Filler	3295	1
	NOTE: Dipstick Assembly includes Ref. No. 49.		
39	DISC — Breather	7152	1
40	DISTRIBUTOR — Oil	12017	1
41	FELT — Lubrication (Cam Follower)	P5504	1
42	FLYWHEEL ASSEMBLY — With Magnets	7999-A	1
	NOTE: Sold as an Assembly only.		

BASIC PARTS LIST (Continued)

Ref. No.	PART DESCRIPTION	Part No.	Quantity
43	GASKET — Air Cleaner to Air Horn.....	10259	1
44	GASKET — Air Horn	3990	1
45	GASKET — Base	4465-1	1
46	GASKET — Bearing Plate (Standard, .015 Thick).....	3056	1
	NOTE: Gaskets are also available in the following thicknesses: .005, .010 and .020. Order by Part Number and specify thickness.		
47	GASKET — Breather	7153	1
48	GASKET — Cylinder Head	12253	1
49	GASKET — Dipstick Assembly	3297	1
50	GASKET — Carburetor to Block.....	6002	1
51	GASKET — Spark Plug	3115	1
52	GASKET — Valve Chamber Cover.....	3057	1
	GASKET KIT — Engine Overhaul	6249	1
	GASKET KIT — Engine Overhaul (With Speed Reducer Units).....	6248	1
	NOTE: Kit contains all necessary Gaskets and Oil Seals.		
53	HEAD — Cylinder.....	12011	1
54	HORN — Air Cleaner.....	10350-C	1
55	HOUSING — Blower	7907-A	1
	HOUSING — Blower (For Recoil Starter).....	7913-A	1
56	KEY — Flywheel.....	10339	1
57	LEAD — High Tension	P5555	1
58	LEVER — Speed Adjusting	3075	1
59	LINE — Fuel, Flexible	6316	1
60	LINK — Carburetor to Governor Arm.....	7920	1
61	LOCK — Connecting Rod Screw.....	12018	1
62	MUFFLER ASSEMBLY	12062-A	1
63	NIPPLE — ½" NPT, Thd. 2".....	12061	1
64	NUT — Hexagon, 7/16-20 (Starter Pulley).....	5476	1
65	NUT — Square, #10-24 (Arm to Governor Lever).....	3253	1
66	NUT — Wing (Air Cleaner Screw).....	7044	1
67	NUT & L'WASHER ASS'Y — Hexagon, ¼-28 (1—Valve Cover Stud, 2—Carburetor to Block).....	3255-A	3
68	PIN — Drive (Baffle Plate to Block).....	3569	1
69	PIN — Retaining (Governor Yoke).....	3656	1
70	PIN — Wrist	6024	1
71	PISTON — Standard	12000	1
	PISTON ASSEMBLY — Standard.....	12000-A	1
	NOTE: Piston Assemblies are also available in the following over- sizes: .005, .010, .020, .030 and .040. Order by Number and specify oversize. Piston Assembly includes Ref. Nos. 70, 71, 80, 81, 82, and 83.		
72	PLATE — Baffle, Crankcase	3559	1
73	PLATE — Name	6530	1
74	PLATE — Bearing	12054	1
	NOTE: Bearing Plate includes Ref. Nos. 7, and 104.		
75	PLUG — Button, Air	12340	3
76	PLUG — Camshaft Axle	3281	1
77	PLUG — Oil Drain	3289	2
78	PULLEY ASSEMBLY — Starter.....	4882-A	1
79	RETAINER — Valve Spring	3028	2
80	RING — Compression, Standard	12030	1
81	RING — Oil, Standard	12032	1
82	RING — Retainer, Wrist Pin.....	6034	2
83	RING — Scraper, Standard	12031	1
	RING SET — Standard.....	12023	1
	NOTE: Ring Sets are also available in the following oversizes: .005, .010, .020, .030 and .040. Order by Part Number and specify oversize. Ring Set includes Ref. Nos. 80, 81 and 83.		

CLINTON

S	E	R	I	E	S
A-1200					
LONG LIFE					

**BASIC
TYPE**
**SEC. II, DIV. A-1200
PARTS CATALOG**
 Revised April, 1958
 Supersedes Nov., 1957
BASIC PARTS LIST (Continued)

Ref. No.	PART DESCRIPTION	Part No.	Quantity
84	RIVET — Tubular, Name Plate	5469	4
85	ROD ASSEMBLY — Connecting	12002-A	1
	NOTE: Rod Assembly includes Ref. Nos. 61 and 90.		
86	ROPE ASSEMBLY — Starter	4266	1
87	SCREEN — Revolving	6226	1
88	SCREW — F.H.M., #10-24 x 5-15/16 (Air Cleaner)	6119	1
89	SCREW — P.H.S.T., #4-40 x 1/4 (Coil Ground to Laminations)	5641	1
90	SCREW — H.H.C., 1/4-28 x 1 1/8 (Connecting Rod Cap)	5635	2
91	SCREW — H.H. Slotted S.T., #8-32 x 3/8 (Governor Adjusting)	5644	1
92	SCREW — R.H.S.T., #6-32 x 3/8 (Breaker Cover to Bearing Plate)	5405	2
93	SCREW — R.H.M., #10-24 x 5/8 (Governor Throttle Arm)	3211	1
94	SCREW — R.H.M., #6-32 x 1/4 (Breaker Points Terminal)	5664	2
95	SCREW — F.H.M., #8-32 x 11/16 (Air Horn to Carburetor)	5677	2
96	SCREW — H.H.C., 7/16-20 x 2 (Base to Block)	3200	2
97	SCREW — H.H.C., 5/16-18 x 1 1/4 (Cylinder Head to Block)	5652	6
98	SCREW & L'WASHER ASS'Y — R.H.S.T., #8-32 x 3/8 (Condenser to Bearing Plate)	5674-F	1
99	SCREW & L'WASHER ASS'Y — F.H.M., #10-32 x 1/2 (Bracket to Head)	5412-G	1
100	SCREW & L'WASHER ASS'Y — H.H.C., 1/4-28 x 5/8 (Bracket to Head)	7236-G	2
101	SCREW & L'WASHER ASS'Y — H.H.C., 1/4-28 x 3/4 (Bearing Plate to Block)	5448-F	4
102	SCREW & L'WASHER ASS'Y — H.H.C., 1/4-20 x 5/8 (6—Blower Housing to Bearing Plate, 1—Fuel Tank Bracket)	3632-G	7
103	SCREW & L'WASHER ASS'Y — R.H.M., 10-24 x 1 (Strap to Bracket)	5421-A	2
104	SCREW & L'WASHER ASS'Y — P.H.S.T., #10-24 x 1 (Lamination to Bearing Plate)	5682-A	2
105	SCREW & L'WASHER ASS'Y — R.H.M., #10-32 x 3/8 (2—Deflector to Block, 1—Speed Adjusting Lever)	3222-F	3
106	SCREW & L'WASHER ASS'Y — R.H.M., #8-32 x 1/3 (Breaker Points to Bearing Plate)	5409-F	1
107	SEAL — Oil, Bearing Plate	12304	1
108	SEAL — Oil, Block	3669	1
109	SEAL — Breaker Points Cover	5596	1
110	SEAT — Breather	7150	1
111	SPARK PLUG AND GASKET ASSEMBLY	K3568-A	1
112	SPRING — Backlash (Governor to Carburetor)	7979	1
113	SPRING — Breather (Hold-Down)	7154	1
114	SPRING — Governor (Speed Adjusting)	4001	1
115	SPRING — Valve	3068	2
116	STRAP — Fuel Tank	12060	2
117	STUD — Valve Chamber Cover	5680	1
118	STUD — Carburetor Mounting	6155	2
119	TANK ASSEMBLY — Fuel	12058-A	1
	NOTE: Assembly includes Ref. No. 16.		
120	TAPPET — Valve	3034	2
121	TERMINAL — Breaker Points	5713	1
122	VALVE — Exhaust, Standard Stem	3031-1	1
	VALVE — Exhaust, Oversize Stem (Approx. 9/32 Dia.)	3031-2	1
123	VALVE — Intake, Standard Stem	3032-1	1
	VALVE — Intake, Oversize Stem (Approx. 9/32 Dia.)	3032-2	1
124	VALVE AND FILTER ASSEMBLY — Fuel, Shut-Off	C3500-A	1
125	WASHER — "C" Valve Keeper	3291	2
126	WASHER — Lock, 7/16 (Base to Block)	3275	2
127	WASHER — Special (Governor Adjusting Arm)	7976	1
128	WASHER — Rubber (Air Cleaner)	5906	1
129	WASHER — Spring Tension (Starter Pulley)	4119	1
130	WEIGHT ASSEMBLY — Governor Yoke	3062-B	1

CLINTON

S E R I E S
A-1200
L O N G L I F E

MODEL VARIATIONS

SEC. II, DIV. A-1200
PARTS CATALOG
Revised January, 1959
Supersedes Mar., 1958

MODEL VARIATIONS OF A-1200 SERIES

The adaptation of Clinton Engines to a wide variety of uses results in what is known as "Model Variations." Following is the complete list of all Models produced up to issue date (shown above). Opposite each Engine Model listed are the Part Numbers and/or Assembly Numbers for the Series used IN ADDITION TO or IN PLACE OF the parts illustrated and shown on the Basic Parts List preceding this Model Variations List. Refer to other sections of this Manual when Assembly Numbers are given to find the Parts List for these assemblies.

See page (a) on "How to Identify Your Clinton Engine." Use the preceding Basic Parts List except as shown below.

ENGINE MODEL—See page (a), "How to Identify Your Clinton Engine."

FOOTNOTES (Check page 4).

BASE — ENGINE (Part Numbers Shown). Refer to Sec. IV, Div. A for details and further information.

CONTROL GROUP (Control Group Illustration Numbers Shown). Refer to Sec. III, Div. D for Parts List.

CONTROL CABLE LENGTH — Replace-ment cable is furnished in 72" length ONLY, cut to length shown.

CRANKSHAFT (Part Numbers Shown). Refer to Sec. IV, Div. B for details and further information.

BEARING — MAIN (Part Numbers Shown). Refer to Illustrated Basic Parts List for location of corresponding part.

BLOCK ASSEMBLY — CYLINDER (Part Numbers Shown). Refer to Illustrated Basic Parts List for corresponding part.

STARTER — RECOIL. Refer to Sec. III, Div. H for Parts List.

HOUSING ASSEMBLY — BLOWER (Part Numbers Shown). Refer to Illustrated Basic Parts List for corresponding part.

REDUCTION GEAR (Assy. Nos. Shown). Refer to Sec. III, Div. C for Parts List.

REDUCTION GEAR MOUNTING POSITION — "Clock" position shows mounting of reduction unit in relation to Crankshaft.

PLATE ASSEMBLY — BEARING (Part Numbers Shown). Refer to Illustrated Basic Parts List for corresponding part.

A-1200-101	Note 1					Yes	7913-D
A-1200-102							
A-1200-103			SK555				
A-1200-104		6025					
A-1200-105		6025				Yes	7913-D
A-1200-106	Notes 17, 18		SK558			Yes	7913-D
A-1200-107				12121			
A-1200-108	Notes 17, 19, 20, 21, 22		SK561	12129	12221	Yes	7913-D
A-1200-109	Note 23		SK561	12123	12218		
A-1200-110		6025	SK555	72"			
A-1200-111			SK555	72"			
A-1200-112			SK555	72"		Yes	7913-D
A-1200-113	Note 2				12217		
A-1200-121	Note 1	6025	SK561	12125	12218		
A-1200-122	No Variation—Use Basic Parts List						
A-1200-123						Yes	7913-D
A-1200-124			SK555			Yes	7913-D
A-1200-125		6025	SK555				
A-1200-126			SK561	12123	12218		
A-1200-127	Note 3		SK561	12123	12218		
A-1200-128	Notes 4, 5, 6, 7, 8, 9, 10		SK558	12127	12219	Yes	12014-A
A-1200-129	No Variation—Use Basic Parts List						
A-1200-130	Notes 20, 24, 25		SK555		12220	Yes	7913-D
A-1200-131	Note 11			12126		Yes	7913-D
A-1200-132	Note 1						
A-1200-133			SK558			Yes	7913-D
A-1200-134			SK558	18"		Yes	7913-D
A-1200-135	Notes 26, 28		SK564				7908-D
A-1200-136	Note 13		SK558			Yes	7913-D
A-1200-137			SK555	72"	12123		
A-1200-138			SK561	12123	12218		
A-1200-139			SK555		12218		

CLINTON

S E R I E S
A-1200
L O N G L I F E

MODEL VARIATIONS

MODEL VARIATIONS OF A-1200 SERIES (Cont.)

ENGINE MODEL	FOOTNOTES	BASE—ENGINE	CONTROL GROUP	CONTROL CABLE LENGTH	CRANKSHAFT	BEARING—MAIN	BLOCK ASSEMBLY—CYLINDER	STARTER—RECOIL	HOUSING ASSEMBLY—BLOWER	REDUCTION GEAR	MOUNTING POSITION	PLATE ASSEMBLY—BEARING
A-1200-140			SK558	72"	12128							
A-1200-141	Notes 4, 5, 6, 7, 9, 16, 27		SK558		12127		12219	Yes	12014-A			
A-1200-142								Yes	7913-D			
A-1200-143		6025	SK555	72"	12128			Yes	7913-D			
A-1200-144	Note 17		SK561		12123		12218					
A-1200-145	Notes 16, 17		SK555	26¼"				Yes	7913-D			
A-1200-146		6025	SK555	72"								
A-1200-147			SK561		12125		12218					
A-1200-148	Note 24		SK555	72"				Yes	7913-D			
A-1200-149	Notes 26, 28		SK555						7908-D			
A-1200-150	Note 24		SK555									
A-1200-151	Notes 16, 28		SK555		12130				7908-D			
A-1200-152			SK555									
A-1200-153			SK555					Yes	7913-D			
A-1200-154	Note 17		SK555					Yes	7913-D			
A-1200-155	Note 24											
A-1200-156		6025	SK558									
A-1200-157	Notes 16, 29				12123		12218	Yes	7913-D			
A-1200-158	Note 16							Yes	7913-D			
A-1200-159					12123		12218	Yes	7913-D			
A-1200-160	No Variation—Use Basic Parts List											
A-1200-161							12218					
A-1200-162	Notes 4, 9, 30		SK561		12123		12219					
A-1200-163	Notes 4, 17		SK561				12219					
A-1200-164	Notes 2, 17		SK555				12217					
A-1200-165	Notes 16, 18, 28, 32							Yes	7913-D			
A-1200-166	Notes 2, 17, 27		SK555				12217					
A-1200-167	No Variation—Use Basic Parts List											
A-1200-168	Notes 4, 9, 23, 29, 30		SK561		12123		12219					
A-1200-170		6025	SK555					Yes	7913-D			
A-1200-171		6025										
A-1200-172	Note 29	7921	SK561		12123		12223					
A-1200-173		6025	SK555	72"	12128			Yes	7913-D			
A-1200-174	Notes 23, 29		SK561		12123		12218					
A-1200-175	No Variation—Use Basic Parts List											
A-1200-176	Notes 29, 30		SK561		12123		12218	Yes	7913-D			
A-1200-177	Notes 4, 30		SK561		12123		12219					
A-1200-178	Notes 4, 30, 33, 34		SK552				12224	Yes	7913-D			
A-1200-179	Notes 4, 30		SK561		12123		12219					
A-1200-180	Notes 4, 8, 9, 31		SK561				12219					
A-1200-181			SK557	72"				Yes	7913-D			
A-1200-182	Notes 4, 5, 6, 7	7918	SK558				12219	Yes	12014-A			
A-1200-183	Notes 17, 18, 32		SK555	72"								

CLINTON

S	E	R	I	E	S		
A-1200							
L	O	N	G	L	I	F	E

MODEL VARIATIONS

SEC. II, DIV. A-1200
PARTS CATALOG
Revised January, 1959
Supersedes Mar., 1958

MODEL VARIATIONS OF A-1200 SERIES (Cont.)

ENGINE MODEL	FOOTNOTES	BASE—ENGINE	CONTROL GROUP	CONTROL CABLE LENGTH	CRANKSHAFT	BEARING—MAIN	ROCK ASSEMBLY—CYLINDER	STARTER—RECOIL	HOUSING ASSEMBLY—BLOWER	REDUCTION GEAR	MOUNTING POSITION	PLATE ASSEMBLY—BEARING
A-1200-184			SK557					Yes	7913-D			
A-1200-185	Note 17											
A-1200-186	Notes 9, 17		SK561		12123		12218	Yes	7913-D			
A-1200-187	Note 9						12218					
A-1200-188			SK555	72"								
A-1200-189	Note 9						12218	Yes	7913-D			
A-1200-190								Yes	7913-D			
A-1200-191								Yes	7913-D			
A-1200-192	Notes 4, 29, 31, 34		SK557				12224	Yes	7913-D			
A-1200-193	Note 17							Yes	7913-D			
A-1200-194	Notes 4, 17, 30		SK561		12123		12219					
A-1200-195	Note 1	6025	SK555	72"	12125		12218					
A-1200-196	Notes 9, 29, 30				12123		12218	Yes				
A-1200-500	No Variation—Use Basic Parts List											
A-1200-504	Note 1		SK561		12125		12218					
A-1200-507	No Variation—Use Basic Parts List											
A-1220					12122					3552	6:00	
A-1240	Note 11				12124					3554	6:00	
A-1240-100	Notes 1, 11				12124					3554	12:00	
A-1260	Note 11				12126					3800	6:00	
A-1260-100	Note 11	6025	SK555	72"	12126					3800	6:00	
A-1260-101	Note 11		SK555	72"	12126					3800	6:00	
A-1260-102	Note 11		SK555	72"	12126			Yes	7913-D	3800	6:00	
A-1260-103	Note 11				12126			Yes	7913-D	3800	6:00	
A-1260-104	Notes 11, 20		SK558	54"	12126					3800	6:00	
A-1260-105	Note 11		SK555	72"	12126					3800	3:00	
A-1260-106	Note 11				12126					3800	9:00	
A-1260-107	Note 11		SK555		12126					3800	9:00	
A-1260-108	Note 11	6025	SK555		12126					3800	6:00	
A-1260-109	Note 11		SK555		12126					3800	6:00	
A-1260-110	Note 11		SK555		12126			Yes	7913-D	3800	6:00	
A-1260-111	Notes 8, 11, 24, 27, 35	6025			12126					3800	6:00	
A-1260-112	Note 11		SK555	72"	12126			Yes	7913-D	3800	12:00	
A-1260-122	Note 11				12126					3800	6:00	
A-1260-123	Note 11				12126			Yes	7913-D	3800	6:00	
A-1260-124	Note 11				12126					3800	6:00	
A-1260-125	Note 11		SK555	72"	12126			Yes	7913-D	3800	9:00	
A-1260-500	Note 11				12126					3800	6:00	
A-1260-501	Notes 1, 11				12126					3800	6:00	
A-1200-2299	Notes 14, 15, 16		SK561					Yes	7913-D			
A-1200-2230	Notes 14, 16		SK561					Yes	7913-D			

MODEL VARIATIONS OF A-1200 SERIES (Cont.)

- NOTE 1—Special Kerosene parts as follows: #12012 Head, #12026-A Deflector Assembly, #3576 Nipple, #4584 Valve, and #4585 Cup, Priming.
- NOTE 2—Starter Generator adaptation as follows: #K-12071 Bracket, #K-12070 Bracket, #K-12072 Bracket, #K-12077 Starter Generator, #K-12076 V-Belt, #12250 Gasket, #12089 Cover, #5484 L'Washer, #5635 Screw, #3204-G Screw & L'Washer, #3221-G Screw & L'Washer, #5648-G Screw & L'Washer, #3249 Nut, #3276 Washer, #3232-G Screw & L'Washer, #3205-G Screw & L'Washer, #7999-B Flywheel, #12079 Pin, #12073 Screw, #12075 Sheave, #12074 Pulley, #5475 Nut.
- NOTE 3—Use #12055 Plate Bearing, #5715-A Wire Assembly, #P-5566 Grommet and #5644 Screw.
- NOTE 4—Use #3994 Insert and #3031-3 Valve, exhaust stellite. (Use stel exhaust valve as intake valve.)
- NOTE 5—Use #2551-B Wire Assembly, Shorting.
- NOTE 6—Use #12316 Nipple, #12317 Cup and #5820 Plug (Pipe).
- NOTE 7—Use #7999-E Flywheel and #P-4938 Pulley (Starting & P.T.O.), #12318 Spacer.
- NOTE 8—Use #3059-A Cup Assembly, Fuel Tank.
- NOTE 9—Use #6215-A Air Cleaner and #5637 Screw.
- NOTE 10—Use #90155-A Tank and Bracket Assembly.
- NOTE 11—Use #12306 Cup, #12305 Bearing Cone, #3136 Oil Seal (Block).
- NOTE 12—Use #12309 Nipple.
- NOTE 13—Use #7953 Link.
- NOTE 14—Use #14356 Carburetor, #2075 Gasket, #12307 Plate, #5673-A Screw & L'Washer (2), #12308 Tube, #10353 Sleeve, #12081 Filter Element, #2003 Cover, #5457-A Screw & L'Washer, #6354 Breather Assembly, #4419 Elbow, #4425 Nut, and 4592 Nipple.
- NOTE 15—Use #10077-A Hinge and Strap Assembly, #5654 Screw (2), #7946 Spacer (2), and #10356 Bracket.
- NOTE 16—Use #5051 Fuel Shut-Off.
- NOTE 17—Use #12055 Plate, Bearing, #4186-A Wire Assembly, #7143 Screw, #P-5566 Grommet, #5644 Screw.
- NOTE 18—Use #4557-A Air Cleaner.
- NOTE 19—Use Fuel Pump Parts #14052 Carburetor, #12250 Gasket, #12080 Pump, Fuel, #3632-G Screw & L'Washer, #5053 Connector, #3222-A and #3221-G Screw & L'Washer.
- NOTE 20—Use #6453 Horn, #7938 Cover, #4554 Tube, #10353 Sleeve.
- NOTE 21—Use #21070-A Body Assembly, #2132 Filter, #2003 Cover, #5634 Screw.
- NOTE 22—Use #P-5573-A Lead, #P-5575-A Cup, #5647 Screw (2).
- NOTE 23—Use #16336 Spring.
- NOTE 24—Use #4419 Elbow, #4425 Nut, and #4592 Nipple.
- NOTE 25—Use #7941 Tank, #7948 Bracket, #7949 Strap (2), #5051 Valve, #7946 Spacer, #5654 Screw.
- NOTE 26—Use #3576 Nipple, #C-3500-A Valve, #5053 Connector.
- NOTE 27—Use #12051 Tank, #12065 Strap (2).
- NOTE 28—Use #4090 Tank, #7178 Spacer (2), #5635-G Screw & L'Washer (2), #5421-A Screw & L'Washer (2).
- NOTE 29—Use #12336 Plate, #P-5573-A Lead, #P-5575-A Cup Assembly.
- NOTE 30—Use #12213-A Housing Assembly Bearing, #12315 Spacer.
- NOTE 31—Use #16341 Tank.
- NOTE 32—Use #14357 Carburetor, #12029-A Deflector, #3851 Clamp, #5457 Screw.
- NOTE 33—Use #5725-A Wire Assembly, Ign. Shorting, #7466 Switch Assembly.
- NOTE 34—Use #4517-B Cap Assembly.
- NOTE 35—Use #14090 Carburetor, #7930 Manifold, Intake, #7168 Gasket, Manifold to Carburetor.