


SEC. II, DIV. B-700  
PARTS CATALOG  
Revised July, 1955  
Supersedes Oct., 1953

**CLINTON**

**SERIES**  
**B-700**  
**4 - CYCLE**

**BASIC**  
**TYPES**

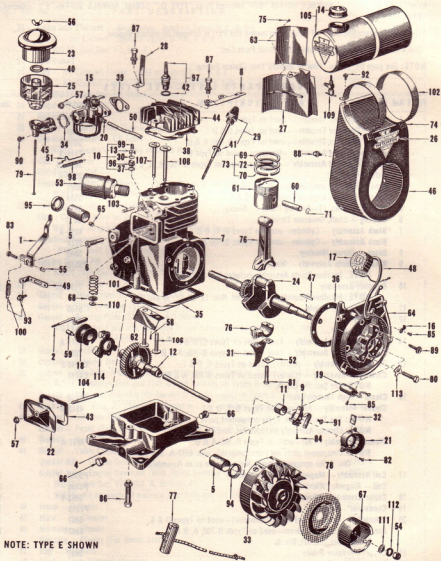

NOTE: TYPE E SHOWN

**CLINTON**

S	E	R	I	E	S
<b>B-700</b>					
A	-	C	-	C	E

BASIC  
TYPESSEC. II, DIV. B-700  
PARTS CATALOG  
Revised July, 1955  
Supernedes Oct., 1953

There are six Basic Types of the B-700 Engines covered by this Basic Parts List. Parts not used on all Types are noted. These "TYPES" are shown as follows: NO SERIAL NUMBER SUFFIX—referred to as "TYPE B-700." SERIAL NUMBER SUFFIX "A"—referred to as "TYPE A." SERIAL NUMBER SUFFIX "B"—referred to as "TYPE B." SERIAL NUMBER SUFFIX "C"—referred to as "TYPE C." SERIAL NUMBER SUFFIX "D"—referred to as "TYPE D." SERIAL NUMBER SUFFIX "E"—referred to as "TYPE E."

\*The asterisk preceding any Part Description means this Part is different on certain Models.

Check for Model Variations following this Basic Parts List.

NOTE: See page no. (a) on "How to Identify Your Clinton Engine."

## BASIC PARTS LIST — ALL TYPES

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
1	Arm — Governor Throttle — used on Type E	3144	1
	Arm — Governor Throttle — used on Types C & D	3901	1
	Arm — Governor Throttle — used on Types B-700, A & B	3519-1	1
2	Arm and Weight Assembly — Governor—used on Type E	3149-A	1
	Arm and Weight Assembly — Governor—used on Types B-700, A, B, C & D	3067-78	1
3	Axle — Camshaft	3593-A	1
4	*Base — Engine—used on Types B, C, D & E	6025	1
	*Base — Engine—used on Types B-700 & A	3538	1
5	*Bearing — Main (1—Bearing Plate, 1—Block)	3024	2
6	Bearing — Shaft, Governor Throttle	3073	1
7	*Block Assembly — Cylinder—used on Types B, C, D & E	4050-A	1
	Block Assembly — Cylinder—used on Types B-700 & A	4228	1
8	Brace — Blower Housing	5049	1
9	Breaker Points Assembly — Magneto	P5510	1
	NOTE: Breaker Points Assembly includes Ref. No. 84.		
10	Breather Assembly	7150-A2	1
	NOTE: Breather Assembly includes Ref. Nos. 13, 30, 37, 96 and 99.		
11	Cam — Breaker Points	5105	1
12	Camshaft	6041	1
13	Cap — Breather	7151	1
14	Cap and Gasket Assembly — Fuel—used on Types C, D & E	4517-A	1
	Cap and Gasket Assembly — Fuel—used on Types B-700, A & B	3059	1
15	Carburetor Assembly — (Carter)—used on Types C, D & E	C4446-2	1
	Carburetor Assembly — (Carter)—used on Types B-700, A & B	C4446	1
	NOTE: See Sec. III, Div. A.		
16	Clamp — High Tension Lead	C3410	1
	Cleaner Assembly — Air—used on Types B, C, D & E	4512-A	1
	NOTE: See Sec. III, Div. F, for component parts.		
	NOTE: Cleaner Assembly includes Ref. Nos. 23, 25, & 40.		
	Cleaner Assembly — Air—used on Types B-700, A & B	7217-A	1
	NOTE: Component parts not interchangeable with 4512-A. See Sec. III, Div. F, for component parts. Not available as an Assembly.		
17	Coil Assembly — Magneto (With Laminations)	P5502	1
	Coil — Magneto (Without Laminations)	P5509	1
18	Collar Assembly — Governor	3063-1	1
19	Condenser — Magneto	P7219	1
20	Connector — Flexible Fuel Line (Carburetor)—used on Types D & E	5053	1
	Connector — Fuel Line, Brass—used on Types B-700, A, B & C	3562	1
	NOTE: See Sec. III, Div. G.		
21	Cover — Breaker Points	5062	1
22	Cover — Valve Chamber	3035	1

BASIC PARTS LIST — ALL TYPES (CONTINUED)

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
23	Cover and Element — Air Cleaner—used on Types B, C, D & E	4512	1
	Cover — Air Cleaner—used on Types B-700, A & B	7217-1	1
	NOTE: See Sec. III, Div. F.		
24	*Crankshaft	5129	1
25	Cup — Air Cleaner, Lower—used on Types B, C, D & E	4513	1
	Cup — Air Cleaner, Lower—used on Types B-700, A & B	7217-2	1
	NOTE: See Sec. III, Div. F.		
26	Decal—Arrowhead	3579	3
27	Deflector — Air	5092	1
28	Device — Shorting Clip (Spark Plug)	3599	1
29	Dipstick Assembly — Oil Filler	3295	1
	NOTE: Dipstick Assembly includes Ref. No. 41.		
30	Disc — Breather	7152	1
31	Distributor — Oil	4007	1
	Element — Filter, Air Cleaner—used on Types B-700, A & B	7217-3	1
	NOTE: See Sec. III, Div. F.		
32	Felt — Lubrication, Cam Follower	P5504	1
	Fin — Cooling—used on Types B-700, A & B	3134	3
	NOTE: Fins can be eliminated by using 6002 Gasket.		
33	Flywheel Assembly — With Magnets	5111	1
	NOTE: Sold as an Assembly only.		
	Engine Repair Kit	6304	1
	NOTE: See Sec. VIII, Div. A, Bulletin 57.		
34	Gasket — Air Horn	3990	1
35	Gasket — Base—used on Types B, C, D & E	6031	1
	Gasket — Base—used on Types B-700 & A	3054	1
36	Gasket — Bearing Plate (Standard, .015 thick)	3056	1
	NOTE: Gaskets are also available in the following thicknesses: .005, .010 and .020. Order by Part No. and specify thickness.		
37	Gasket — Breather	7153	1
38	Gasket — Cylinder Head	3055	1
39	Gasket — Manifold, Asbestos (Carburetor to Block)—used on Types C, D & E	6002	1
	NOTE: Replaces Fins and 7149 & 7168 Gaskets on Types B-700, A & B.		
	Gasket — Manifold, Asbestos (Carburetor to Block)—used on Types B-700, A & B	7149	1
40	Gasket — "O" Ring, Air Cleaner (Element to Cup)—used on Types B, C, D & E	4515	1
41	Gasket — Oil Filler Cap, Dipstick	3297	1
	Gasket — Paper (Fins to Carburetor)—used on Types B-700, A & B	7168	3
42	Gasket — Spark Plug	3115	1
43	Gasket — Valve Chamber Cover	3057	1
	Gasket Kit — Engine Overhaul	3055-A	1
	Gasket Kit — Engine Overhaul (With Speed Reducer Units)	3055-B	1
	NOTE: See Sec. VIII, Div. A, Bulletin 48.		
	NOTE: Kit contains all necessary Gaskets and Oil Seals.		
44	Head — Cylinder	3091-A	1
45	Horn — Air Cleaner	3991	1
46	Housing — Blower	5012	1
	Housing — Blower (For Recoil Starter)	5013-E	1
47	Key — Flywheel	7244	1
48	Lead — High Tension, Magneto	P5521	1
49	Lever — Speed Adjusting	3075	1
50	Line — Fuel, Flexible—used on Types D & E	6316	1

**CLINTON**

S E R I E S
<b>B-700</b>
4 - C Y C L E

BASIC  
TYPESSEC. II, DIV. B-700  
PARTS CATALOG  
Revised July, 1955  
Supersedes Oct., 1953**BASIC PARTS LIST — ALL TYPES (CONTINUED)**

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
	<b>Line</b> — Fuel — used on Types B-700, A, B & C	5600	1
	<b>NOTE:</b> See Sec. III, Div. G.		
51	<b>Link</b> — Carburetor to Governor Arm — used on Type E	4100	1
	<b>Link</b> — Carburetor to Governor Arm — used on Types B-700, A, B, C & D	3074	1
52	<b>Lock</b> — Connecting Rod Screw	3027	2
53	<b>Muffler</b> — Tubular	3639	1
54	<b>Nut</b> — Hexagon, 7/16-20 (Starter Pulley)	3250	1
55	<b>Nut</b> — Square, #10-24 (Governor Arm to Throttle Lever) — used on Types B-700, A, B, C & D	3253	1
	<b>Nut</b> — Hexagon, Gripco, #8-32 (Governor Arm to Throttle Lever) — used on Type E	5524	2
56	<b>Nut</b> — Wing (Air Cleaner Screw)	7044	1
57	<b>Nut &amp; L'washer Ass'y</b> — Hexagon, 1/4-28 (2 — Carburetor Studs, 1 — Valve Chamber Cover)	3255-A	3
58	<b>Pin</b> — Drive (Baffle Plate to Block)	3569	1
59	<b>Pin</b> — Retaining (Governor Yoke)	3656	1
60	<b>Pin</b> — Wrist	3033	1
61	<b>Piston</b> — Standard	3021	1
	<b>Piston Assembly</b> — Standard	3021-A	1
	<b>NOTE:</b> Piston Assemblies are also available in the following oversizes: .005, .010, .020, .030, and .040. Order by Part No. and specify oversize. Piston Assembly includes Ref. Nos. 60, 61, 71 & 73.		
62	<b>Plate</b> — Baffle, Crankcase	3559	1
63	<b>Plate</b> — Name, Clinton Engines	6530	1
64	<b>Plate</b> — Bearing	5506-1	1
	<b>NOTE:</b> Bearing Plate includes Ref. Nos. 5 and 94.		
	<b>Plate Assembly</b> — Bearing & Magneto	C5505-1	1
	<b>NOTE:</b> Bearing & Magneto Plate Assembly includes Ref. Nos. 9, 17, 19, 64, 85, 89 and 91.		
65	<b>Plug</b> — Camshaft Axle	3281	1
66	<b>Plug</b> — Oil Drain	3289	2
67	<b>Pulley</b> — Starter	3299	1
68	<b>Retainer</b> — Valve Spring	3028	2
69	<b>Ring</b> — Compression, Standard	3572	1
70	<b>Ring</b> — Oil, 3/16, Standard — used on Types A, B, C, D & E	3574-1	1
	<b>Ring</b> — Oil, 1/8, Standard — used on Type B-700	3574	1
71	<b>Ring</b> — Retainer, Wrist Pin	3030	2
72	<b>Ring</b> — Scraper, Standard	3573	1
73	<b>Ring Set</b> — Standard (3/16 Oil Ring) — used on Types A, B, C, D & E	3048-1	1
	<b>Ring Set</b> — Standard (1/8 Oil Ring) — used on Type B-700	3048	1
	<b>NOTE:</b> Ring Sets are also available in the following oversizes: .005, .010, .020, .030, and .040. Order by Part No. and specify oversize.		
	<b>NOTE:</b> Ring Set includes Ref. Nos. 69, 70 & 72.		
74	<b>Rivet</b> — Tubular, 3/16 x 9/32 (Tank Strap to Blower Housing)	3619	2
75	<b>Rivet</b> — Tubular, Name Plate	3660	4
76	<b>Rod Assembly</b> — Connecting	3022-B	1
	<b>NOTE:</b> Rod Assembly includes Ref. Nos. 52 & 81		
77	<b>Rope Assembly</b> — Starter	4266	1
78	<b>Screen</b> — Revolving	7265	1
79	<b>Screw</b> — F.H., #10-24 x 5-5/8 (Air Cleaner)	7249	1
80	<b>Screw</b> — H.H.C., 1/4-28 x 3/4 (Bearing Plate to Block)	5431	4
81	<b>Screw</b> — H.H.C., 1/4-28 x 1-1/4 (Connecting Rod Cap)	3235	2

**BASIC PARTS LIST — ALL TYPES (CONTINUED)**

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
82	Screw O.H.S.T., #6-32 x 3/8 (Breaker Cover to Bearing Plate)	5416	2
83	Screw R.H., #10-24 x 5/8 (Governor Throttle) used on Types A, B, C, & D	3211	1
84	Screw R.H.S.T., #6-32 x 3/8 (Breaker Points Terminal)	5405	1
85	Screw R.H.S.T., #8-32 x 1/4 (1 Clamp to Bearing Plate, 1- Condenser to Bearing Plate)	5415	2
86	Screw & L'washer Ass'y H.H.C., 7/16-20 x 2 (Base to Block)	6076-G	2
87	Screw & L'washer Ass'y H.H.C., 5/16-18 x 1 (Cylinder Head to Block)	3201-D	6
88	Screw & L'washer Ass'y H.H.C., 1/4-20 x 1/2 (Blower Housing to Bearing Plate)	3205-G	4
89	Screw & L'washer Ass'y Pan H.S.T., 1/4-20 x 1 (Coil to Bearing Plate)	5406-B	2
90	Screw & L'washer Ass'y R.H.M., #8-32 x 3/4 (Air Horn to Carburetor)	7113-G	2
91	Screw & L'washer Ass'y R.H.M., #8-32 x 5/16 (Breaker Points to Bearing Plate)	5407-F	1
92	Screw & L'washer Ass'y R.H.M., #10-24 x 1-1/4 (Fuel Tank Straps)	5422-A	2
93	Screw & L'washer Ass'y R.H.M., #10-32 x 3/8 (Speed Adjusting Lever)	3222-F	1
94	Seal Oil (Bearing Plate)	3136	1
95	*Seal Oil (Cylinder Block)	3026	1
96	Seal Breather	7150	1
97	Spark Plug and Gasket Assembly	3568	1
98	Spring Backlash, Governor	3097	1
99	Spring Breather Hold Down	7154	1
100	Spring Governor	4001	1
101	Spring Valve	3068	2
102	Strap Fuel Tank	5015	2
103	Stud 1/4-28 x 1 (Carburetor to Block) — used on Types B, C, D & E	6155	2
	Stud 1/4-28 x 1-932 (Carburetor to Block) — used on Types B-700 & A	3096	2
104	Stud Valve Chamber Cover	3042	1
105	Tank Assembly — Fuel — used on Types C, D & E	3481-A	1
	Tank Assembly — Fuel — used on Types B-700, A & B	3050-1A	1
	NOTE: Tank Assembly includes Ref. No. 14.		
106	Tappet — Valve	3034	2
107	Valve Exhaust, Standard Stem	3031-1	1
	Valve Exhaust, Oversize Stem (Approx. 9/32 Dia.)	3031-2	1
108	Valve Intake, Standard Stem	3032-1	1
	Valve Intake, Oversize Stem (Approx. 9/32 Dia.)	3032-2	1
109	Valve Fuel, Shut-Off, Flexible Line — used on Types D & E	5051	1
	Valve Fuel, Shut-Off — used on Types B-700, A, B & C	5050	1
	NOTE: See Sec. III, Div. G.		
110	Washer — "C", Valve Keeper	3291	2
111	Washer — Flat, 7/16 (Starter Pulley)	5482	1
112	Washer — Lock, 7/16 (Starter Pulley)	3275	1
113	Washer — Lock, Tab Type (Bearing Plate to Block)	7028	4
114	Weight Assembly — Governor Yoke	4205	1

**AVAILABLE OVERHAUL KITS**

Engine Model	Description	Kit No.
B-700	Gasket Overhaul Kit	3055-A
*B-700	Gasket Overhaul Kit	3055-B
All Types	Engine Repair Kit	6304
All Types	Carburetor Repair Kit (Carter)	C3964

\*With Speed Reducer Units.

## MODEL VARIATIONS OF B-700 SERIES

The adaptation of Clinton Engines to a wide variety of uses result in what is known as "Model Variations". Following is the complete list of all Models produced up to issue date (Shown above). Opposite each Engine Model listed are the Part Numbers and/or Assembly Numbers for the Series used IN ADDITION TO or IN PLACE OF the parts illustrated and shown on the Basic Parts List preceding this Model Variations List. Refer to other sections of this Manual when Assembly Numbers are given to find the Parts List for these assemblies.

See page (a) on "How to Identify Your Clinton Engine". Use the preceding Basic Parts List except as shown below.

ENGINE MODEL—See Page (a), "How to Identify Your Clinton Engine".	FUEL SYSTEM, (Illustration Numbers Shown) Refer to Sec. III, Div. G for Parts List.	BASE—ENGINE, (Part Numbers Shown) refer to Sec. IV, Div. A for details and further information.	BEARING—MAIN, (Part Numbers Shown) Refer to Illustrated Basic Parts List for location of corresponding part.	BLOCK ASSEMBLY—CYLINDER, (Part Number Shown) refer to Illustrated Basic Parts List for corresponding part.	CONTROL GROUP, (Control Group Illustration Numbers Shown) refer to Sec. III, Div. D for Parts List.	CONTROL CABLE LENGTH, replacement cable is furnished in 72" length ONLY, cut to length shown.	CRANKSHAFT, (Part Numbers Shown) refer to Sec. IV, Div. B for details and further information.	STARTER—WICK OR RECOIL, (Assembly Numbers Shown) refer to Sec. III, Div. C and Div. H for Parts Lists.	REDUCTION GEAR, (Assembly Numbers Shown) refer to Sec. III, Div. B for Parts List.	REDUCTION GEAR MOUNTING POSITION, "Lock" position shows mounting of reduction unit in relation to Crankshaft.	SEAL—OIL, (Part Numbers Shown) refer to Illustrated Basic Parts List for location of corresponding part.
B-700-1	No Variation, use Basic Parts List.										
B-700-2					SK-101-1	62"					
B-700-3					SK-165-1						
B-700-4					SK-101-1	61"					
B-700-5					SK-114-1						
B-700-6	No Variation, use Basic Parts List.										
B-700-7	No Variation, use Basic Parts List.										
B-700-9	No Variation, use Basic Parts List.										
B-700-10					SK-101-1	72"					
B-700-11	SK-907										
B-700-12					SK-101-1	36"					
B-700-15	Note 1	5036			SK-165-1	62"					
B-700-17	No Variation, use Basic Parts List.										
B-700-18		3531									
B-700-19					SK-101-1	72"					
B-700-20	No Variation, use Basic Parts List.										
B-700-21								5143			
B-700-22	No Variation, use Basic Parts List.										
B-700-23	No Variation, use Basic Parts List.										
B-700-24		3531									
B-700-25					SK-101-1	72"					
B-700-26	No Variation, use Basic Parts List.										
B-700-27		3531			SK-101-1	62"					
B-700-28	Note 2	3531			SK-165-1	45"					
B-700-29					SK-165-1	72"		C6312			
B-700-30		3531			SK-314-1						
B-700-31		3531			SK-101-1	36"					
B-700-32	Note 2				SK-165-1	43"					
B-700-33		3531			SK-165-1	72"					
B-700-34					SK-101-1						
B-700-35					SK-165-1	54"					
B-700-36		3531			SK-314-1	62"					
B-700-37					SK-314-1	61"					
B-700-38		3531			SK-314-1	66"					

**MODEL VARIATIONS OF B-700 SERIES (Cont.)**

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Fuel	Base-Eng.	Bearing	Bik. Assy.	Con. Grp.	Cable	Crank.	Starter	Red. Gr.	Pos'n.	Seal
B-700-39		3531			SK-101-1	72"					
B-700-40		3531			SK-165-1						
B-700-41					SK-314-1	62"					
B-700-42					SK-165-1	36"					
B-700-43	No Variation, use Basic Parts List.										
B-700-44					SK-165-1	72"					
B-700-45		5036			SK-165-1	72"					
B-700-46	No Variation, use Basic Parts List.										
B-700-47	Note 7	5034			SK-165-1	62"		3720			
B-700-48					SK-101-1	72"	5130		3800	6.00	
B-700-49	No Variation, use Basic Parts List.										
B-700-50	Note 2	3531			SK-165-1	43"					
B-700-51					SK-165-1	62"					
B-700-52	Note 3	5034			SK-165-1	40"		3720			
B-700-53		3531			SK-165-1	48"					
B-700-54	No Variation, use Basic Parts List.										
B-700-A9B	Note 12										
B-700-A1A	SK-907										
B-700-A0A	No Variation, use Basic Parts List.										
B-700-A0B	No Variation, use Basic Parts List.										
B-700-A0C	No Variation, use Basic Parts List.										
B-700-A0D	No Variation, use Basic Parts List.										
B-700-A0E	No Variation, use Basic Parts List.										
B-700-A0F	SK-907										
B-700-A0G				4166			5143				
B-700-A0H	No Variation, use Basic Parts List.										
B-700-A0J	No Variation, use Basic Parts List.										
B-700-A0K	SK-903	Note 5									
B-700-A0L	No Variation, use Basic Parts List.										
B-700-A0N	No Variation, use Basic Parts List.										
B-700-A0P	No Variation, use Basic Parts List.										
B-700-A0R	No Variation, use Basic Parts List.										
B-700-A0U	No Variation, use Basic Parts List.										
B-700-A0RA										C6312	
B-700-A0RB										C6312	
B-700-A0RC	Note 9									C6312	
B-700-A0S	(Use 3828 Air Cleaner Ass'y; See Sec. III, Div. F)										
B-700-A0SA	5040									C6324	
B-700-A0SB										C6324	
B-700-B0A	Note 3										
B-700-B0B	No Variation, use Basic Parts List										
B-700-B0C	No Variation, use Basic Parts List										
B-700-C0A	Note 10	5040									
B-700-C0B	Note 10	5040									
B-700-C0C		5040									
B-700-C0D		5040									
B-700-C0E	No Variation, use Basic Parts List.										
B-700-C0F		5040									
B-700-C0G		5040									
B-700-C0H	SK-907	5040									

**CLINTON**

S	E	R	I	E	S
<b>B-700</b>					
4 - C Y C L E					

MODEL  
VARIATIONSSEC. II, DIV. B-700  
PARTS CATALOG  
Revised July, 1955  
Supersedes July, 1954**MODEL VARIATIONS OF B-700 SERIES (Cont.)**

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Fuel	Base-Eng.	Bearing	Blk. Assy.	Con. Grp.	Cable	Crank.	Starter	Red. Gr.	Pos'n.	Seal
B-700-COJ	Note 7	5040									
B-700-COK		5040									
B-700-COL		5040									
B-700-CORA		5040						C6312			
B-700-COSA		5040						C6324			
B-700-DOA		5040									
B-700-DOB		5040									
B-700-DOC	Note 1	5036									
B-700-DOE	Note 7	5040									
B-700-EOA		6036-1						3720			
B-700-EOB		6036-1						3720			
B-700-EOC		6036-1						3720			
B-700-EOD	Note 9	6036-1						3720			
B-700-F	No Variation, use Basic Parts List.										
B-700-GOA		5034						3720			
B-700-HOA		6036-1		4168				3720			
B-700-M	No Variation, use Basic Parts List.										
B-700-MRG							5130		3800	6:00	
B-700-MS		5034						3720			
B-700-POA		5040									
B-700-POB	Note 10	5040									
B-700-ZOA		5040									
B-701					SK-165-1	54"					
B-701-1		5036			SK-165-1	54"					
B-701-2					SK-165-1	54"					
B-701-3		3531			SK-165-1	48"	5142				
B-701-AIA	SK-907				SK-101-1	72"					
B-701-AOA					SK-101-1	50"					
B-701-AOB					SK-101-1	52"					
B-701-AOC					SK-101-1	24"					
B-701-AOD	SK-907				SK-101-1	72"					
B-701-AOE				4166	SK-101-1						
B-701-AOF					SK-101-1	72"					
B-701-AOG					SK-101-1	62"					
B-701-AOH					SK-101-1	72"					
B-701-AOJ					SK-101-1	36"					
B-701-AOK					SK-101-1						
B-701-AOL					SK-101-1	54"					
B-701-AORA					SK-101-1			C6312			
B-701-AOSA					SK-101-1			C6324			
B-701-AOSB					SK-101-1	72"		C6324			
B-701-BOA					SK-101-1						
B-701-BOB					SK-101-1	72"					
B-701-BORA					SK-101-1			C6312			
B-701-CIB	SK-907	5040			SK-101-1					(Use 4045 Air Horn)	
B-701-CIC	SK-907	5040	Note 13		SK-101-1						
B-701-COA		5040			SK-101-1	48"					
B-701-COB		5040			SK-101-1						
B-701-COC		5040			SK-101-1	72"					
B-701-COD		5040			SK-101-1	36"					



**MODEL VARIATIONS OF B-700 SERIES (Cont.)**

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Fuel	Base Eng.	Bearing	Blk. Assy.	Con. Grp.	Cable	Crank.	Starter	Red. Gr.	Pos'n.	Seal
B-701-COE		5040			SK-101-1	72"					
B-701-COF		5040			SK-101-1						
B-701-COG		5040			SK-101-1						
B-701-COH	SK-906	5040			SK-101-1			Note 8			
B-701-COJ	Note 7	5040			SK-101-1	48"					
B-701-COK	Note 8	5040			SK-101-1		(Use 4045 Air Horn)				
B-701-COL	Note 14	5040			SK-101-1	36"					
B-701-CORB		5040			SK-101-1	72"		C6312			
B-701-CORC		5040			SK-101-1			C6312			
B-701-COSA		5040			SK-101-1			C6324			
B-701-COSB		5040			SK-101-1	72"		C6324			
B-701-DOA		5040			SK-101-1	62"					
B-701-DOB		5040			SK-101-1						
B-701-DOC		5040			SK-101-1						
B-701-DOD	Note 7	5040			SK-101-1	48"					
B-701-EOA		6036-1			SK-101-1	36"		3720			
B-701-EOB		6036-1			SK-101-1	62"		3720			
B-701-ZOB				4166	SK-101-1	36"	5143				
B-702	Note 4				SK-314-1						
B-702-1	Note 4				SK-314						
B-702-2	No Variation, use Basic Parts List.										
B-702-3		3531			SK-314-1	36"					
B-702-6		3531					5143				
B-702-AOA					SK-165-1						
B-702-AOB					SK-165-1	54"					
B-702-AOC					SK-165-1	36"					
B-702-AOD					SK-165-1	72"					
B-702-AOE					SK-165-1	62"					
B-702-AOF					SK-165-1						
B-702-CIB	SK-907	5040			SK-165-1	48"					
B-702-COA		5040			SK-165-1	52"					
B-702-COB		5040			SK-165-1	72"					
B-702-COC		5040			SK-165-1						
B-702-COD	Note 2	5040			SK-165-1	43"					
B-702-COE		5040			SK-512-1	72"					
B-702-COF		5040			SK-512-1						
B-702-COG	Note 7	5040			SK-512-1	72"					
B-702-COH		5040			SK-512-1	44"					
B-702-CORB		5040			SK-512-1	44"		C6312			
B-702-COSB		5040			SK-512-1	44"		C6324			
B-702-DIB	SK-907	5040			SK-165-1	48"					
B-702-DOA		5040			SK-165-1						
B-702-DOB	SK-907	5040			SK-165-1	72"					
B-702-DOC		5040			SK-165-1						
B-702-EOA		6036-1			SK-165-1	48"		3720			
B-702-EOB		6036-1			SK-165-1	62"		3720			
B-703		5034						3775			
B-703-AOB					SK-114-2	72"					
B-703-AORB					SK-114-2	72"		C6312			
B-703-AOSB					SK-114-2	72"		C6324			

**CLINTON**

S E R I E S
<b>B-700</b>
4 - C Y C L E

MODEL  
VARIATIONSSEC. II, DIV. B-700  
PARTS CATALOG  
Revised July, 1955  
Supersedes July, 1954**MODEL VARIATIONS OF B-700 SERIES (Cont.)**

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Fuel	Base-Eng.	Bearing	Blk. Assy.	Con. Grp.	Cable	Crank.	Starter	Red. Gr.	Pos'n.	Seal
B-703-COB	SK-906	5040			SK-114-2			(Use 5014 Housing & 3389 Gov. Arm.)			
B-704-AOA					SK-314-2	62"					
B-704-AOB					SK-314-2	62"					
B-704-BOA		5040			SK-114-2						
B-704-COB		5040			SK-314-2	72"					
B-704-COC		5040			SK-314-2	43"					
B-704-COD		5040			SK-314-2						
B-704-COE		5040			SK-314-2						
B-704-COF		5040			SK-114-2	72"					
B-704-COG		5040			SK-314-2						
B-704-COH	Note 2	5040			SK-114-2						
B-704-COJ		5040			SK-114-2						
B-704-COK	Note 9	5040			SK-114-2	60"					
B-704-COL		5040			SK-314-2						
B-704-COM	Note 14	5040			SK-114-2						
B-704-COSB	Note 14	5040			SK-114-2			C6324			
B-704-DOA		5040			SK-314-2	72"					
B-704-POB		5040			SK-314-2						
B-704-POC		5040			SK-114-2						
B-705-1		5034			SK-101-1	44"		3720			
B-705-CIB	SK-902	5040		4170-A	SK-164-1	72"		(Note 16)			
B-705-COA		3531			SK-165-1						
B-706	SK-907	3531									
B-706-AOA					SK-512-1	54"					
B-706-AOB					SK-512-1						
B-706-BOA		5040			SK-512-1						
B-707-CIA	SK-907	5040			SK-513						
B-708-COB		5040			SK-518	72"	5128				
B-708-DOB		5040			SK-518	72"	5128				
B-720							5132		3552	12.00	
B-720-AOA							5132		3552	12.00	
B-720-AOB							5132		3552	12.00	
B-720-AOC							5132		3552	6.00	
B-720-AOSA							5132	C6324	3552	6.00	
B-727		3531									
B-740-1					SK-101-1	72"	5131		3554	3.00	
B-740-2					SK-101-1	72"	5131		3554	6.00	
B-740-AOA							5131		3554	6.00	
B-740-EOA		6036-1					5131	3720	3554	6.00	
B-741-AOA					SK-101-1	72"	5131		3554	3.00	
B-742-AOA					SK-165-1		5131		3554	3.00	
B-742-AOB					SK-165-1	72"	5131		3554	6.00	
B-742-BOA					SK-165-1		5131		3554	3.00	
B-760							5130		3800	12.00	
B-760-1					SK-101-1	72"	5130		3800	6.00	
B-760-2					SK-165-1	36"	5130		3800	6.00	
B-760-3					SK-101-1	72"	5130		3800	9.00	
B-760-4					SK-101-1	66"	5130		3800	3.00	
B-760-5		3531			SK-165-1	72"	5130		3800	9.00	
B-760-6					SK-101-1	72"	5130		3800	6.00	

**MODEL VARIATIONS OF B-700 SERIES (Cont.)**

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Fuel	Base-Eng.	Bearing	Blk. Assy.	Con. Grp.	Cable	Crank.	Starter	Red. Gr.	Pos'n.	Seal
B-760-8					SK-314-1	72"	5130		3800	6:00	
B-760-9							5130		3800	12:00	
B-760-10					SK-165-1	62"	5130		3800	6:00	
B-760-11					SK-101-1	54"	5130		3800	6:00	
B-760-12		3531			SK-314-1	60"	5130		3800	9:00	
B-760-AOA							5130		3800	6:00	
B-760-AOB							5130		3800	12:00	
B-760-AOC							5130		3800	3:00	
B-760-AOD							5130		3800	6:00	
B-760-AORA							5130	C6312	3800	6:00	
B-760-AORB							5130	C6312	3800	6:00	
B-760-AOSA							5130	C6324	3800	6:00	
B-760-AOSB							5130	C6324	3800	6:00	
B-760-COA		5040					5130		3800	12:00	
B-760-COB		5040					5130		3800	6:00	
B-760-COSA		5040					5130	C6324	3800	6:00	
B-760-EOA		6036-1					5130	3720	3800	12:00	
B-760-POB		5040					5130		3800	12:00	
B-760-ZOA		5040					5130		3800	6:00	
B-761-AOA					SK-101-1	72"	5130		3800	12:00	
B-761-AOB					SK-101-1		5130		3800	12:00	
B-761-AOC					SK-101-1		5130		3800	3:00	
B-761-AOD					SK-101-1	48"	5130		3800	9:00	
B-761-AOE					SK-101-1	72"	5130		3800	6:00	
B-761-AOF					SK-101-1		5130		3800	6:00	
B-761-AOG					SK-101-1	54"	5130		3800	6:00	
B-761-AOH					SK-101-1	72"	5130		3800	9:00	
B-761-AOJ					SK-101-1	36"	5130		3800	9:00	
B-761-AORB					SK-101-1	72"	5130	C6312	3800	6:00	
B-761-AORC					SK-101-1	72"	5130	C6312	3800	9:00	
B-761-AOSB					SK-101-1	72"	5130	C6324	3800	9:00	
B-761-AOSC					SK-101-1	72"	5130	C6324	3800	6:00	
B-761-COA		5040			SK-101-1	48"	5130		3800	9:00	
B-761-COB		5040			SK-101-1	40"	5130		3800	9:00	
B-761-COC		5040			SK-101-1	72"	5130		3800	6:00	
B-761-COD		5040			SK-101-1	54"	5130		3800	6:00	
B-761-COE		5040			SK-101-1		5130		3800	6:00	
B-761-COF		5040			SK-101-1		5130		3800	9:00	
B-761-CORB		5040			SK-101-1	72"	5130	C6312	3800	12:00	
B-761-CORC		5040			SK-101-1	72"	5130	C6312	3800	6:00	
B-761-COSB		5040			SK-101-1	72"	5130	C6324	3800	12:00	
B-761-COSC		5040			SK-101-1	72"	5130	C6324	3800	6:00	
B-762-1					SK-101-1	66"	5130		3800	3:00	
B-762-2		3531			SK-101-1	40"	5130		3800	9:00	
B-762-AOA					SK-165-1	72"	5130		3800	6:00	
B-762-AOB					SK-165-1	62"	5130		3800	6:00	
B-762-COA		5040			SK-165-1		5130		3800	12:00	
B-762-COC		5040			SK-165-1	72"	5130		3800	9:00	
B-762-POB		5040			SK-512-1	72"	5130		3800	9:00	
B-763-ZOA					SK-114-1	36"	5130		3800	9:00	

**CLINTON**

S E R I E S
<b>B-700</b>
4 - C Y C L E

MODEL  
VARIATIONSSEC. II, DIV. B-700  
PARTS CATALOG  
Revised July, 1955  
Supersedes July, 1954**MODEL VARIATIONS OF B-700 SERIES (Cont.)**

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Fuel	Base-Eng.	Bearing	Blk. Assy.	Con. Grp.	Cable	Crank.	Starter	Red Gr.	Pos'n.	Seal
B-764-AOA					SK-314-1		5130		3800	6:00	
B-764-COA		5040			SK-314-2		5130		3800	9:00	
B-764-COB		5040			SK-314-2	72"	5130		3800	3:00	
B-764-COC		5040			SK-314-2		5130		3800	12:00	
B-774		3531			SK-165-1						
B-780		3531	3670	4165			5141				3669
B-780-AOA	Note 10		3670	4163			5144				6130
B-782-1	Note 5		3670	4163	SK-165-1	62"	5137				6130
B-790-1		3531	3670	4165			5141				3669
B-790-2		5036	3670	4165			5140				3669
B-790-3		3531	3670	4165			5136				3669
B-790-4		3531	3670	4165			5139				3669
B-790-5		3538	3670	4165			5140				3669
B-790-AOA (Type A)			3670	4169			5139				3669
B-790-AOA			3670	4164			5139	See Sec. III Div. F			3669
B-790-AOB			3670	4165			5139				3669
B-790-AOC			3670	4162			5139				3669
B-790-AOD			3670	4165			5133				3669
B-790-AOE			3670	4167			5148				3669
B-790-AOF	Note 15		3670	4164			5139	See Sec. III Div. F			3669
B-790-AORB			3670	4167			5148	C6312			3669
B-790-AOSB			3670	4167			5148	C6324			3669
B-790-AIA	SK-907		3670	4162			5139	See Sec. III Div. F			3669
B-790-BOA	Note 9		3670	4165			5140				3669
B-790-BOA (Type A)		3531	3670	4165			5133				3669
B-790-BOA		5040	3670	4165			5133				3669
B-790-COB		5040	3670	4164			5133				3669
B-790-COC		5040	3670	4165			5139				3669
B-790-COD		5040	3670	4165			5149				3669
B-790-COE		5040	3670	4165			5140				3669
B-790-COF		5040	3670	4165			5153				3669
B-790-COG	Note 9	5040	3670	4165			5140				3669
B-790-COH		5040	3670	4165			5152				3669
B-790-COJ		5040	3670	4165			5139				3669
B-790-COK		5040	3670	4165			5133				3669
B-790-COSB	Note 9	5040	3670	4165			5154	C6324			3669
B-790-DOA (Type A)		3531	3670	4165			5147				3669
B-790-DOA		5040	3670	4165			5147				3669
B-790-DOB	Note 9	5040	3670	4165			5140				3669
B-790-DOC		5040	3670	4165			5152				3669
B-790-EOA		6036-1	3670	4167			5148	3720			3669
B-790-EOB		6036-1	3670	4165			5133	3720			3669
B-790-POB		5040	3670	4165			5133				3669
B-780-POC		5040	3670	4165			5152				3669
B-791-AOB	Note 12		3670	4165	SK-101-1	72"	5139				3669
B-791-AOB			3670	4165	SK-101-1	72"	5139				3669
B-791-COA		5040	3670	4164	SK-101-1	72"	5133				3669
B-791-COB		5040	3670	4164	SK-101-1		5133				3669
B-791-COC		5040	3670	4164	SK-101-1		5133				3669
B-791-C5A	Note 11	5040	3670	4169	SK-101-1		5151				6152

MODEL VARIATIONS OF B-700 SERIES (Cont.)

- Note 1 — A low base is used on this model and the following parts replace like parts in the basic parts list: 5016 Distributor, oil; 5095 Dipstick Assembly, Oil; (2) 5400 Bolts, Hexagon Head 7/16—20 x 1 1/4.
- Note 2 — (2) 3741 Spacer, head bolt used as an additional part.  
(2) 3292 Bolt replaces (2) 3201 Cylinder Head Bolt.
- Note 3 — 4419 Elbow, Street and 4425 Nut, Grip are used as additional parts.
- Note 4 — TILLOTSON CARBURETOR, C3300 and 3072 Arm are replaced by C-4446-2 and 3519-1.
- Note 5 — 6129 Ring, snap used to retain Main Bearing.
- Note 7 — Use 4500 Muffler and 4425 Nut.
- Note 8 — Use 5013 Housing, Blower.
- Note 9 — Use C5057-B Magneto & Bearing Plate Assembly. See Sec. III, Div. K.
- Note 10 — Use 4001 Spring and 3851 Cable Clamp.
- Note 11 — Use 6156 Fell Washer, 6157 Washer, 6158 Retaining Ring; additional parts with 6152 Oil Seal.  
Use 6183-A Valve Chamber and Cleaner Assy Cover.  
Use 4108 Fuel Line or 6316-A Flexible Fuel Line Kit.
- Note 12 — Use 3378 Tank, (2) 3059-A Cap & Gasket Assy.-Fuel, (2) 5054 Connector—90°, Flex Fuel, 3391 Valve, Fuel Shut-off—2 way  
(2) 6316—Line, Flex Fuel, (2) 6002 Gasket Carb., (2) 3096 Stud Carb., 3390 Head.
- Note 13 — Use 4018-A Valve Chamber Cover Assy., 4088 Air Horn and 6316 Flex Line-Breather Tube, 5053 Connector-Breather Tube, 4017 Bell Guard and 3221-G Screw & L'Washer Assy.
- Note 14 — Use 4018-A Valve Chamber Cover Assy., 6005 Air Horn, 5053 or 5052 Connector-Breather Tube and 6316 Flex Line-Breather Tube.
- Note 15 — Use 2129-A Air Cleaner Assy., 2075 Gasket, 5456-A (2) Screw & L'Washer Assy.; See Sec. III, Div. F.
- Note 16 — Use 3483-A Tank Bracket Assy., 4203 Arm & Weight Assy., Governor; 4098 Manifold, Carburetor; 7168 Gasket, Manifold; 3828 Air Cleaner Assy.; 7205 (2) Screw and 3255-A (2) Nut & L'Washer Assy., Manifold to Carburetor.