




# D-35 PARTS LIST

Sec. II, Div. D-35-1000  
Basic Parts List

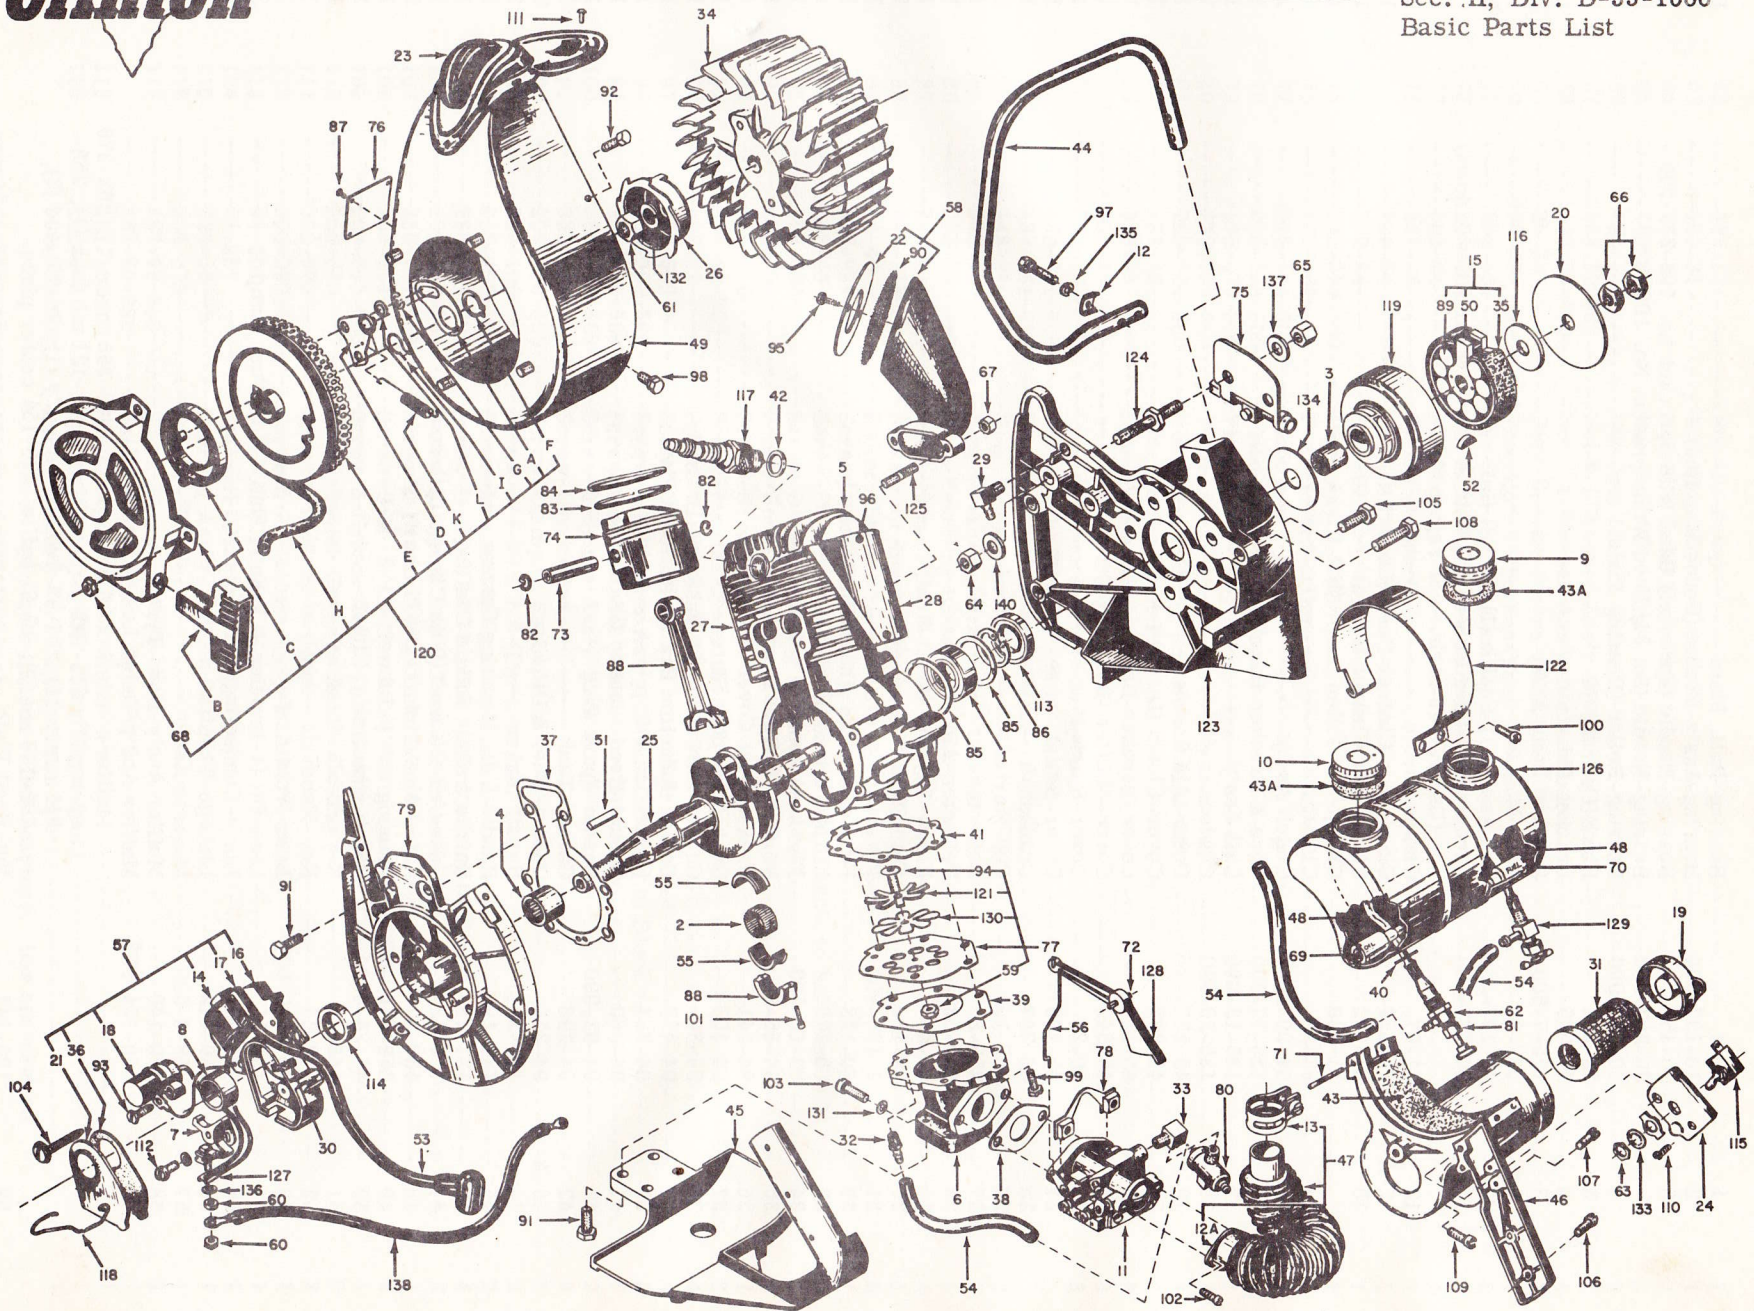

IMPORTANT: CHECK NAME PLATE FOR MODEL SERIES, USE COLUMNS DESIGNATED WHEN ORDERING PARTS.

Printed in U. S. A.

D-35-1000 Basic Parts List

Ref. No.	Part No.	Description	Qty.
1	20-4	Bearing-Ball, Main -----	1
2	20-197-500	Bearing Ass'y-Needle (Connecting Rod) -----	1
3	20-153	Bearing-Needle (Sprocket) Used With Sprocket No. 106-239-500 -	1
	20-202-500	Bearing-Needle (Set 34) Used With Sprocket No. 106-408 -----	1
4	20-198-990	Bearing-Roller (Bearing Plate) -----	1
5	22-804	Block-Cylinder -----	1
6	26-545	Bracket-Induction -----	1
7	135-7-500	Breaker Point Ass'y -----	1
8	157-31	Cam-Magneto -----	1
9 & 10	45-197-500	Cap Ass'y-(1) Fuel & (1) Oil -----	2
11	39-772-500	Carburetor (Refer to Sec. III, Div. A for ill. & parts break down) (Use 39-913 carburetor repair kit) -----	1
12	81-87	Clamp-Handle -----	4
12-A	81-159	Clamp-Air Cleaner Hose (Lower) -----	1
13	81-162	Clamp-Air Cleaner Hose (Upper) -----	1
	81-139	Clamp-Air Filter Cover (Not Ill.) - - - - -	1
14	81-20	Clip-Core -----	1
15	44-90-500	Clutch Ass'y -----	1
16	135-37-500	Core & Breaker Box Ass'y -----	1
17	135-13-990	Coil Ass'y -----	1
18	135-29-990	Condenser -----	1
19	45-257	Cover-Air Cleaner -----	1
20	45-279	Cover-Clutch (Dirt) -----	1
21	45-15	Cover-Breaker Box -----	1
22	45-342	Cover-Muffler (Horn Type) -----	1
23	70-28	Cover-Spark Plug -----	1
24	45-259	Cover-Switch -----	1
25	46-767	Crankshaft -----	1
26	265-198	Cup-Starter -----	1
27	259-6	Deflector-Air -----	1
28	259-632	Deflector-Air -----	1
29	69-24	Elbow-Bayonet (Main Strut) -----	1
30	94-189	Felt-Cam Wiper -----	1
31	2-128-500	Filter Ass'y-Air -----	1
32	69-123	Fitting-Bayonet (Induction Bracket) -----	1
33	69-278	Fitting-Elbow (Carburetor) -----	1
34	83-62-500	Flywheel Ass'y -----	1
35	44-85-500	Friction & Steel Band Ass'y -----	1
36	94-241	Gasket-Dust Cover -----	1
37	94-105	Gasket-Bearing Plate -----	1
38	94-30	Gasket-Carburetor to Induction Bracket -----	1
39	94-438	Gasket-Induction Bracket to Reed Plate -----	1
40	94-281	Gasket-Oil Pump -----	1
41	94-360	Gasket-Reed Plate to Block - - - - -	1
42	94-92-990	Gasket-Spark Plug -----	1
43	94-296	Gasket-Tank -----	1
43-A	94-275	Gasket-Fuel & Oil Cap -----	2
44	121-204	Handle-Frame -----	1
45	121-190	Handle & L. Mounting Casting -----	1
46	121-189	Handle & Tank Saddle Casting -----	1
47	158-421	Hose-Air Cleaner (With Clamps both ends) -----	1
48	158-274	Hose-(1) Fuel & (1) Oil (Snake) -----	2
49	259-618-500	Housing Ass'y-Blower -----	1
50	44-88-500	Hub & Arm Ass'y-Clutch -----	1
51	148-4	Key-Flywheel -----	1
52	148-24	Key-Woodruff -----	1
53	307-299-500	Lead-Wire Ass'y -----	1
54	158-25	Line-Oil (1-Impulse & 1-Fuel) Shut-Off to Fuel Pump -----	3
55	136-77	Liner-Connecting Rod -----	2
56	159-112	Linkage-Throttle -----	1
57	268-6-500	Magneto Ass'y -----	1
58	170-149	Muffler Ass'y-Horn Type -----	1
	170-154-500	Muffler Ass'y-Delux Low-Tone (Not Ill.) ----- Muffler consists of following parts: 900-355 cover (1), 263-379 spring (2), 215-512 plate baffle (1), 81-121 tab lock (1), 258- 811 screw (1), 257-99-500 screen ass'y (1), 24-77 stud (2), 183-176 nut (2), 17-61 baffle, 170-154 center piece.	
59	183-141	Nut-Reed Plate -----	1
60	183-21	Nut-Hex Shorting Wire #8-32 (Term.) -----	2
61	183-158	Nut-Hex 7/16-20 (Flywheel) -----	1

Ref. No.	Part No.	Description	Qty.
62	183-12	Nut-Oil Pump -----	1
63	183-21	Nut-Hex. Shorting Switch -----	1
64	183-190	Nut-Stud to Main Casting -----	2
65	183-195	Nut-Guide Bar Stud -----	2
66	183-131	Nut-Jam (Clutch Cover) -----	2
67	183-29-500	Nut & L'Washer Ass'y-Muffler to Block -----	2
68	183-25-500	Nut & L'Washer Ass'y-Recoil Starter -----	4
69	25-28	Pick-Up with Screen-Oil -----	1
70	25-38	Pick-Up with Screen-Fuel -----	1
71	203-137	Pin-Roll (Handle Casting) -----	1
72	203-107	Pin-Roll (Trigger Handle) -----	1
73	203-61	Pin-Wrist -----	1
74	204-66	Piston-Standard -----	1
	206-54	.010 Oversize -----	1
	207-54	.020 Oversize -----	1
75	215-368-500	Plate Ass'y-Chain Tension -----	1
76	137-387	Plate-Identification -----	1
77	215-444-500	Plate Ass'y-Reed -----	1
78	215-332-500	Plate Ass'y-Retaining -----	1
79	125-473-500	Plate Ass'y-Bearing -----	1
80	220-122-500	Pump-Fuel -----	1
81	220-144-500	Pump Ass'y-Oil (Pump Button #121-201) -----	1
82	232-40	Ring-Lock, Wrist Pin -----	2
83	233-45	Ring-Piston, Comp. -----	3
	235-45	.010 Oversize -----	3
	237-45	.020 Oversize -----	3
	233-141-500	Chrome Re-Ring Set, Std. -----	
	237-141-500	Chrome Re-Ring Set, .020 -----	
84	148-31	Ring-Piston, Lock -----	3
85	232-83	Ring-Retaining (Bearing) -----	2
86	232-73	Ring-Retaining (Crank) -----	1
87	244-21	Rivet-Name Plate -----	4
88	245-118	Rod & Cap Ass'y-Incl. Ref. Nos. 2, 55, 101 -----	1
89	44-46	Roller-Clutch -----	8
90	257-92	Screen-Muffler (Horn Type) -----	1
91	258-43	Screw-(6) Bearing Plate to Block & (4) Handle to Induction Brkt. -	10
92	258-602	Screw-Blower Housing to Block -----	1
93	258-299	Screw-Condenser -----	1
94	258-516	Screw-Reed Plate -----	1
95	258-40-500	Screw-Muffler Cover (Horn Type) -----	2
96	258-81	Screw-R. H. S. T. 8-32 x 3/8 (Deflector) -----	4
97	258-569	Screw-H. H. 1/4-20 x 1/2 (Handle) -----	4
98	258-280-500	Screw & L'Washer Ass'y-Blower Housing to Block -----	3
99	258-586-500	Screw & Nylock Ass'y-Induction Bracket -----	6
100	258-592-500	Screw & Nylock Ass'y-Tank Strap -----	2
101	258-901	Screw-Cap to Rod -----	2
102	258-198-500	Screw-Clamp to Carburetor -----	2
103	258-106	Screw-1/4-20 x 7/8 (Carb. to Ind. Brkt.) -----	2
104	258-108-500	Screw-Magneto to Bearing Plate -----	2
105	258-281-500	Screw-H. H. 5/16-18 x 7/8 (Main Casting to Block) -----	4
106	258-677-500	Screw & Nylock Ass'y-Tank Saddle to Handle -----	2
107	258-681-500	Screw & Nylock Ass'y-Tank Saddle to L. Handle -----	1
108	258-751	Screw-H. H. 5/16-18 x 1 1/4 (Main Casting to Saddle) -----	2
109	258-692-500	Screw & Nylock Ass'y-Tank Saddle to Main Casting -----	1
110	258-680	Screw-Switch Cover to Saddle Casting -----	2
111	258-573	Screw-Tie Strap to Block -----	2
112	258-297-500	Screw & L'Washer Ass'y-Breaker Points -----	1
113	94-301	Seal-Oil (Cylinder Block) -----	1
114	94-257	Seal-Oil (Bearing Plate) -----	1
115	266-53	Shorting Ass'y-Ignition Switch -----	1
116	304-373	Spacer-Clutch Cover -----	1
117	267-73-500	Spark Plug Ass'y -----	1
	267-55-990	Spark Plug (Used on Type "A") -----	1
118	263-10	Spring-Breaker Box Cover -----	1
119	106-408	Sprocket Ass'y-.404" Pitch (Open Spur) -----	1
	106-239-500	Sprocket Ass'y- 1/2" Pitch (Open Spur) -----	1
		Note: Sprockets include roller bearings. Use sprocket as required.	
120	265-215-500	Starter Ass'y -----	1

Ref. No.	Part No.	Description	Qty.
121	293-97	Stop-Reed -----	1
122	26-445	Strap-Tank Retainer (For Round Tank) -----	1
	26-446	Strap-Tank Retainer (For Teardrop Tank) -----	1
123	26-477	Strut-Main -----	1
124	24-70	Stud-Guide Bar -----	1
125	24-11	Stud-Muffler to Block (Horn Type) -----	2
126	277-406-500	Tank Ass'y-Fuel (Round Type) -----	1
	277-285-500	Tank Ass'y-Fuel (Teardrop Type) -----	1
127	307-230	Terminal-Jamtite -----	1
128	157-296	Trigger-Throttle -----	1
129	293-122	Valve-Fuel Shut-Off -----	1
130	293-96	Valve-Reed -----	1
131	304-26	Washer-Internal Lock (Induction Bracket) -----	2
132	304-25	Washer-Lock (Flywheel) -----	1
133	304-368	Washer-Shorting Switch -----	1
134	304-430	Washer-Chain Guide -----	1
135	304-26	Washer-Lock (Handle) -----	4
136	304-290	Washer-Terminal -----	1
137	304-337	Washer-Guide Bar Stud -----	2
138	307-265-500	Wire-Shorting -----	1

RECOIL STARTER PARTS-(For Recoil 265-215-500)

A	157-1	Actuator -----	1
B	121-6	Handle -----	1
C	124-160-500	Housing-Incl. Recoil Spring -----	1
D	157-352-500	Pawl & Pin Assembly -----	1
E	219-154-500	Pulley Assembly -----	1
		Latest pulley has been redesigned and now uses 258-272-500 screw & l'washer ass'y-H. H. S. T. 10-32 x 3/8 and 304-624 spacer to retain pawl & pin ass'y to pulley. These parts replace the 304-320 washer and 232-35 ring retainer.	
F	232-147	Ring-Retaining -----	1
G	232-35	Ring-Retaining -----	1
H	246-7	Rope -----	1
I	263-133	Spring-Actuator -----	1
J	263-79	Spring-Recoil -----	1
K	263-322	Spring -----	1
L	304-320	Washer -----	1

Below is a list of D-35-1000 model variations. Refer to name plate on chainsaw for model number then to model variation listing for parts other than standard. If the part you are looking for is not listed in the model variation listing, refer to D-35-1000 parts list for correct part.

D-35-1100	Use 121-141 handle, 26-446 strap tank, 277-285-500 tank.
D-35-1101	Use 121-204 handle, 26-550 spike bumper, (2) 258-904-500 screw & l'washer ass'y, 277-274-500 tank ass'y, 45-249-500 cap-oil, 45-270-500 cap-fuel, 106-239-500 sprocket ass'y 1/2" pitch.
D-35-1103	Refer to standard D-35-1000 Basic Parts List.
D-35-1105	Refer to standard D-35-1000 Basic Parts List.
D-35-1107	Refer to Standard D-35-1000 Basic Parts List.
D-35-1108	Use 170-108-500 muffler ass'y, 94-394 gasket muffler, (2) 24-69 stud, (2) 263-266 spring, 107-259 wire lock, (2) 183-194 nut, (2) 304-351 washer.
D-35-1112	Refer to standard D-35-1000 Basic Parts List.
D-35-1113	This is the 149-507 D-35-1000 Short Block.
D-35-1114	Refer to standard D-35-1000 Basic Parts List.
D-35-1115	Refer to standard D-35-1000 Basic Parts List.
D-35-1117	Refer to standard D-35-1000 Basic Parts List.
D-35-1118	Refer to standard D-35-1000 Basic Parts List.
D-35-1119	Refer to standard D-35-1000 Basic Parts List.
D-35-1120	Use 121-204 handle, 277-285-500 tank, 26-446 strap.
D-35-1121	Refer to standard D-35-1000 Basic Parts List, Clinton does not supply sprocket ass'y with this unit.
D-35-1122	Refer to standard D-35-1000 Basic Parts List.
D-35-1123	Use Delux Low-Tone muffler listed in Basic Parts List.