


SEC. II, DIV. V-1000-1000  
PARTS CATALOG  
Revised December, 1959  
Supersedes Dec., 1958

CLINTON

S E R I E S  
V-1000-1000  
L O N G L I F E

BASIC  
TYPE

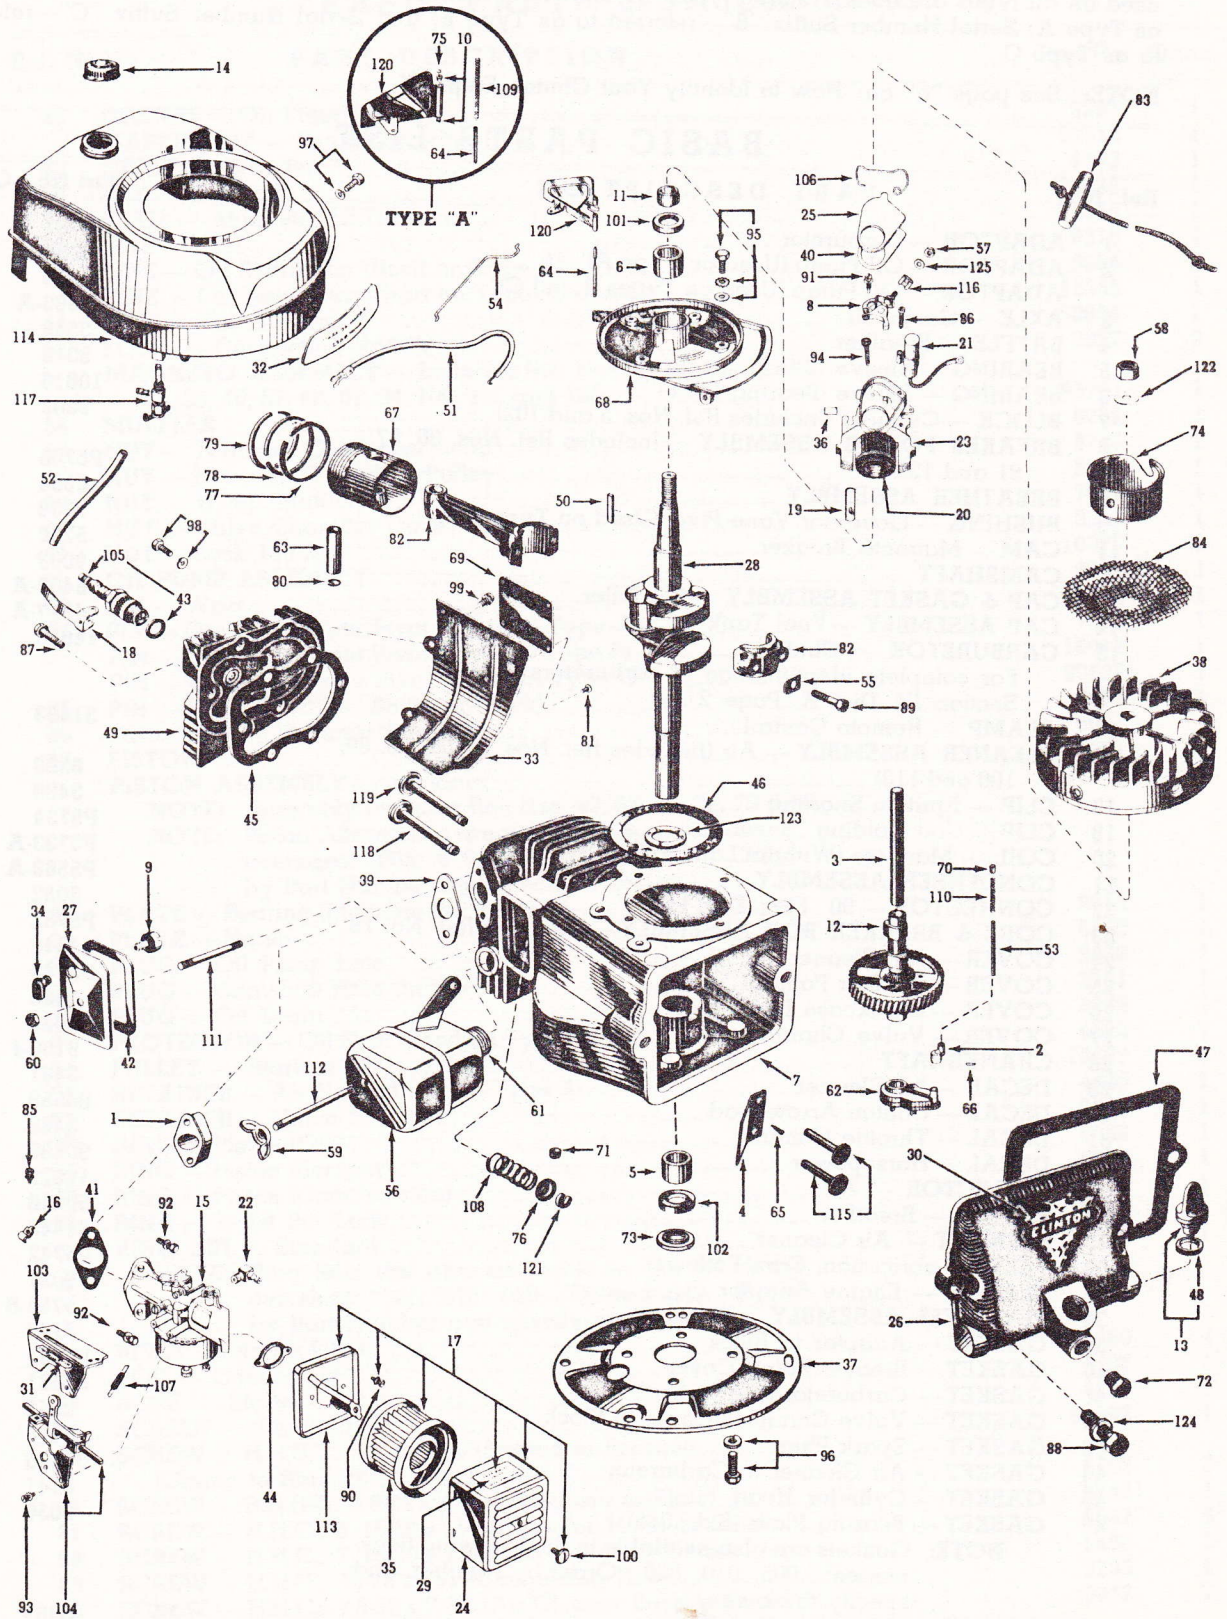

**CLINTON**

S	E	R	I	E	S		
<b>V-1000-1000</b>							
L	O	N	G	L	I	F	E

**BASIC  
TYPE**
**SEC. II, DIV. V-1000-1000  
PARTS CATALOG**  
 Revised December, 1959  
 Supersedes Dec., 1958

There are three Basic Types of the V-1000-1000 Series Engine covered by this Basic Parts List. Parts not used on all types are noted. These types are shown as follows: Serial Number Suffix "A"—referred to as Type A; Serial Number Suffix "B"—referred to as Type B; and Serial Number Suffix "C"—referred to as Type C.

**NOTE:** See page "a" on "How to Identify Your Clinton Engine."

## BASIC PARTS LIST

Ref. No.	PART DESCRIPTION	Part No.	Quan.
1	ADAPTOR — Carburetor	12367	1
2	ADAPTOR — Oil Pump (Used on Type A)	9081	1
	ADAPTOR — Oil Pump (Used on Types B and C)	12370	1
3	AXLE — Camshaft	3593-A	1
4	BAFFLE — Breather	3559	1
5	BEARING — Sleeve (Block)	9016	1
6	BEARING — Sleeve (Bearing Plate)	10016	1
7	BLOCK — Cylinder (Includes Ref. Nos. 5 and 102)	9202	1
8	BREAKER POINTS ASSEMBLY — Includes Ref. Nos. 36, 57, 91 and 125	P5735	1
9	BREATHER ASSEMBLY	6354	1
10	BUSHING — Governor Vane Pivot (Used on Type A)	7239	2
11	CAM — Magneto Breaker	5750	1
12	CAMSHAFT	9008	1
13	CAP & GASKET ASSEMBLY — Oil Filler	6438-A	1
14	CAP ASSEMBLY — Fuel Tank	4517-A	1
15	CARBURETOR — Clinton	14055	1
	For complete identification of carburetors, refer to Section III, Div. A, Page 2.		
16	CLAMP — Remote Control	31463	1
17	CLEANER ASSEMBLY — Air (Includes Ref. Nos. 24, 29, 35, 90, 100 and 113)	6393	1
18	CLIP — Ignition Shorting	3499	1
19	CLIP — Coil Holding	P5734	1
20	COIL — Magneto (Without Laminations)	P5733-A	1
21	CONDENSER ASSEMBLY	P5589-A	1
22	CONNECTOR — 90° Flex. Fuel Line	5052	1
23	CORE & BREAKER BOX ASSEMBLY — Includes Ref. No. 19	P5732	1
24	COVER — Air Cleaner	31446	1
25	COVER — Breaker Points	P5743	1
26	COVER — Crankcase End	4466	1
27	COVER — Valve Chamber	3035	1
28	CRANKSHAFT	9100-1	1
29	DECAL — Air Cleaner	3461	1
30	DECAL — Clinton Arrowhead	90559	1
31	DECAL — Throttle Control	3488	1
32	DECAL — Horsepower	90696	1
33	DEFLECTOR — Air	12022	1
34	ELBOW — Breather	90610	1
35	ELEMENT — Air Cleaner	31442	1
36	FELT — Lubrication, Cam Follower	P5742	1
37	FLANGE — Engine Adaptor	9031	1
38	FLYWHEEL ASSEMBLY	5752-B	1
39	GASKET — Adaptor to Block	7149	1
40	GASKET — Breaker Points Cover	P5744	1
41	GASKET — Carburetor to Adaptor	31461	1
42	GASKET — Valve Chamber Cover to Block	3057	1
43	GASKET — Spark Plug	3115	1
44	GASKET — Air Cleaner to Carburetor	31445	1
45	GASKET — Cylinder Head	6141	1
46	GASKET — Bearing Plate (Std. .015)	3056	1
	<b>NOTE:</b> Gaskets are also available in the following thick- nesses: .005, .010, .020. Order by Number, and specify thickness.		
47	GASKET — Crankcase End Cover	4465	1

**CLINTON**

S E R I E S  
**V-1000-1000**  
 L O N G L I F E

**BASIC  
 TYPE**

**BASIC PARTS LIST (Continued)**

Ref. No.	PART DESCRIPTION	Part No.	Quan.
48	GASKET — Oil Filler Plug	3297	1
	GASKET KIT — Engine Overhaul	91554	1
49	HEAD — Cylinder	6140	1
50	KEY — Flywheel	10339	1
51	LEAD — Magneto, Hi-Tension	P5555	1
52	LINE — Fuel	6316	1
53	LINE — Oil Distributor (Used on Type A)	9084	1
	LINE — Oil Distributor (Used on Types B and C)	12355	1
54	LINK — Air Governor	90633	1
55	LOCK — Connecting Rod Screw	3027	2
	MAGNETO ASSEMBLY — Includes Ref. Nos. 8, 19, 20, 21, 23, 25, 36, 40, 57, 86, 91, 94, 106, 116 and 125	P5731	1
56	MUFFLER	6352	1
57	NUT — Terminal Condenser Lead	5740	1
58	NUT — Hex., 1/2-20 (Starter Pulley)	5877	1
59	NUT — Wing (Muffler)	7044	1
60	NUT — Valve Chamber Cover Stud	3255	1
61	NUT — Lock Muffler	10075	1
62	OIL PUMP ASSEMBLY	9085-A	1
63	PIN — Wrist	6024	1
64	PIN — Governor Vane Pivot (Used on Type A)	7238	1
	PIN — Governor Vane Pivot (Used on Type B)	10015	1
	PIN — Governor Vane Pivot (Used on Type C)	90982	1
65	PIN — Drive (Breather Baffle to Block)	3569	1
66	PIN — Drive (Oil Pump Adaptor)	9004	1
67	PISTON	31001	1
	PISTON ASSEMBLY — Standard	31001-A	1
	NOTE: Assembly includes Ref. Nos. 63, 67, 77, 78, 79 & 80.		
	NOTE: Piston Assemblies are available in the following oversizes: .005, .010, .020, .030 and .040. Order by Part Number and specify oversize.		
68	PLATE — Bearing (Includes Ref. No. 101)	9015	1
69	PLATE — Name	6530	1
70	PLUG — Oil Pump Line	9028	1
71	PLUG — Camshaft Hole (In Block)	3281	1
72	PLUG — Oil Drain	3289	1
73	PROTECTOR — Oil Seal (Used on Type A)	4588	1
74	PULLEY — Starting	12397	1
75	RETAINER — Air Vane (Used on Type A)	4430	1
76	RETAINER — Valve Spring	3028	1
77	RING — Piston (Oil)	6006	1
78	RING — Piston (Scraper)	6027	1
79	RING — Piston (Compression)	6026	1
80	RING — Wrist Pin Lock	6034	2
	RING SET — Standard	10023	1
	NOTE: Ring Sets are also available in the following oversizes: .005, .010, .020, .030 and .040. Order by Part Number and specify oversize.		
81	RIVET — Name Plate	5460	4
82	ROD — Connecting	6107	1
83	ROPE — Starter	4266	1
84	SCREEN — Rotating	90092	1
85	SCREW — H.H.S.T., #8-32 x 1/4 (Shroud to Bracket) (Clamp to Shroud)	5892	3
86	SCREW — R.H.S.T., #8-32 x 4/5 (Condenser to Plate)	5741	1
87	SCREW — H.H.C., 5/16-18 x 1 1/4 (Cylinder Head to Block)	5652	6
88	SCREW — H.H.C., 7/16-20 x 1 1/4 (End Cover to Block)	5400	2
89	SCREW — H.H.C., 1/4-28 x 1 1/4 (Connecting Rod)	3235	2
90	SCREW — H.H.C., #8-32 x 7/16 (Air Cleaner Base to Carb.)	5812	2

**CLINTON**

S	E	R	I	E	S		
<b>V-1000-1000</b>							
L	O	N	G	L	I	F	E

**BASIC  
TYPE**
**SEC. II, DIV. V-1000-1000**  
**PARTS CATALOG**  
 Revised December, 1959  
 Supersedes Dec., 1958
**BASIC PARTS LIST (Continued)**

Ref. No.	PART DESCRIPTION	Part No.	Quan.
91	SCREW & L'WASHER ASS'Y — O.H. Slotted, #8-32 x 9/16 (Breaker Points)	5737	1
92	SCREW & L'WASHER ASS'Y — H.H.C., 1/4-28 x 3/4 (Carburetor to Block)	5926-G	2
93	SCREW & L'WASHER ASS'Y — H.H.C., #8-32 x 3/8 (Bracket to Carburetor)	5844-A	2
94	SCREW & L'WASHER ASS'Y — P.H.S.T., #10-24 x 1 (Coil Assembly to Plate)	5682-A	2
95	SCREW & L'WASHER ASS'Y — H.H.C., 1/4-28 x 7/8 (Bearing Plate to Block)	5856-F	4
96	SCREW & L'WASHER ASS'Y — H.H.C., 5 16-18 x 1/2 (Flange to Block)	3221-G	4
97	SCREW & L'WASHER ASS'Y — H.H.C., 1/4-20 x 1/2 (Tank to Bearing Plate)	3205-G	2
98	SCREW & L'WASHER ASS'Y — H.H.C., 1/4-28 x 3/8 (Tank to Cylinder Head)	7236-G	2
99	SCREW & L'WASHER ASS'Y — H.H.C., #8-32 x 3/8 (Deflector to Cylinder Head)	5844-A	2
100	SCREW & L'WASHER ASS'Y — P.H.S., #10-24 x 3/8 (Air Cleaner Cover to Bracket)	3216-A	1
101	SEAL — Oil (Bearing Plate)	3136	1
102	SEAL — Oil (Block)	9029	1
103	SHROUD — Carburetor	11505	1
104	SLIDE ASSEMBLY — Governor Regulating (Used on Types A and B)	6398	1
	SLIDE ASSEMBLY — Governor Regulating (Used on Type C)	91330	1
105	SPARK PLUG ASSEMBLY	K90530-A	1
106	SPRING — Breaker Box Cover	P5745	1
107	SPRING — Extension, Speed Regulating (Used on Types A and B)	90835	1
	SPRING — Extension, Speed Regulating (Used on Type C)	91472	1
108	SPRING — Valve	3068	2
109	SPRING — Compression, Air Vane (Used on Type A)	10005	1
110	SPRING — Oil Distributor Line	9083	1
111	STUD — Valve Chamber Cover	5680	1
112	STUD — Muffler	5861	1
113	SUPPORT ASSEMBLY — Air Cleaner	12365-A	1
114	TANK ASSEMBLY — Fuel (Includes Ref. No. 14)	10370-G	1
115	TAPPETT — Valve	3034	2
116	TERMINAL — Jamtite Condenser Lead	P5738	1
117	VALVE — Fuel Shut-Off	5051	1
118	VALVE — Exhaust	3031-1	1
	VALVE — Exhaust (oversize)	3031-2	1
119	VALVE — Intake	3032-1	1
	VALVE — Intake (oversize)	3032-2	1
120	VANE — Air Governor (Used on Type A)	10393	1
	VANE — Air Governor (Used on Type B)	10014	1
	VANE — Air Governor (Used on Type C)	91033	1
121	WASHER — "C" Valve Keeper	3291	2
122	WASHER — Starter Pulley	5941	1
123	WASHER — Thrust (Crankshaft)	9050	2
124	WASHER — Lock (End Cover to Block)	3275	1
125	WASHER — Terminal Condenser Lead	5739	1

## MODEL VARIATIONS OF V-1000-1000 SERIES

The adaptation of Clinton Engines to a wide variety of uses results in what is known as "Model Variations." Following is the complete list of all Models produced up to issue date (shown above). Opposite each Engine Model listed are the Part Numbers and/or Assembly Numbers for the Series used IN ADDITION TO or IN PLACE OF the parts illustrated and shown on the Basic Parts List preceding this Model Variations List. Refer to other sections of this Manual when Assembly Numbers are given to find the Parts List for these assemblies.

See page (a) on "How to Identify Your Clinton Engine." Use the preceding Basic Parts List except as shown below.

**ENGINE MODEL**—See page (a), "How to Identify Your Clinton Engine."

**FOOTNOTES** (Check bottom of page)

**BASE—ENGINE** (Part Numbers Shown). Refer to Sec. IV, Div. A for further information.

**BLOCK ASSEMBLY — CYLINDER** (Part Number Shown). Refer to Illustrated Basic Parts List for corresponding part.

**CRANKSHAFT** (Part Numbers Shown). Refer to Sec. IV, Div. B for details and further information.

**BEARING—MAIN** (Part Numbers Shown). Refer to Illustrated Basic Parts List for corresponding part.

**CONTROL GROUP** (Control Group Illustration Numbers Shown). Refer to Sec. III, Div. D for Parts List.

**CONTROL CABLE LENGTH** — Replacement cable is furnished in 72" length ONLY, cut to length shown.

**PLATE ASSEMBLY — BEARING** (Part Numbers Shown). Refer to Illustrated Basic Parts List for corresponding part.

**MUFFLER OR MANIFOLD** (Part Numbers shown). Refer to Illustrated Basic Parts List for corresponding part.

**STARTER — RECOIL**. Refer to Sec. III, Div. H for Parts List.

**HOUSING ASSEMBLY — BLOWER** (Part Numbers Shown). Refer to Basic Parts List for corresponding part.

**REDUCTION GEAR** (Assy. Nos. Shown). Refer to Sec. III, Div. C for Parts List.

**MOUNTING POSITION** — "Clock" position shows mounting of reduction unit in relation to Crankshaft.

Model	Variation	Part Numbers	Assembly Numbers	Notes
V-1000-1000	NO VARIATION—USE BASIC PARTS LIST			
V-1000-1101		9102-1		
V-1000-1103	Note 4	9116		
V-1000-1104		9107-1	3639	
V-1000-1105		9101-1		
V-1000-1107		9103-1		
V-1000-1108				
V-1000-1109		9103-1		
V-1000-1110		9124-1		
V-1000-1111		9125-1		
V-1000-1112	Note 3	9107-1		
V-1000-1113	Notes 1 & 2			
V-1000-1115			3639	
V-1000-1116				
V-1000-1117	Note 2			
V-1000-1118				72"
V-1000-1119		9101-1		
V-1000-1120	Note 5			72"
V-1000-1121		9102-1		
V-1000-1123	Note 1		3639	
V-1000-1124	Note 5			
V-1000-1125	Note 2	11115		
V-1000-1126	Note 2			
V-1000-1127	Notes 2 & 5	11115		
V-1000-1129	Notes 2 & 5		4500	
V-1000-1130	Note 5			
V-1000-1131	Note 6		12062-A	
V-1000-1132	Note 6		12062-A	
V-1000-1133				72"
V-1000-1134	Notes 2 & 5			

- NOTE 1—This unit requires special length starter rope in Recoil Starter.
- NOTE 2—Use 12382-A Wire Assembly (Shorting), 3283 Grommet, 10364 Clip, 14290 Nut, 5522 Nut, 5647 Screw, 3462 Decal.
- NOTE 3—Use 5945 Nut (Lock), 7274 90° Elbow, 14290 Nut (Insulation), 10364 Clip (Shorting), 3283 Grommet, 12382-A Wire Assembly (Shorting), 5522 Nut, 5647 Screw, 10320 Knob, 5444-A Screw & L'Washer Ass'y., 5481 L'Washer.
- NOTE 4—See Sec. III, Div. N, Page 3 for parts breakdown on the Below-Deck Electric Starter.
- NOTE 5—Use C91116 Impulse Starter, C91119 Cup, 90872 Screen, 4107-A Nut (4). If original position is not required, use 10370-H Blower Housing.
- NOTE 6—Use 7274 Nut (Lock), 5945 Nut (Lock).