
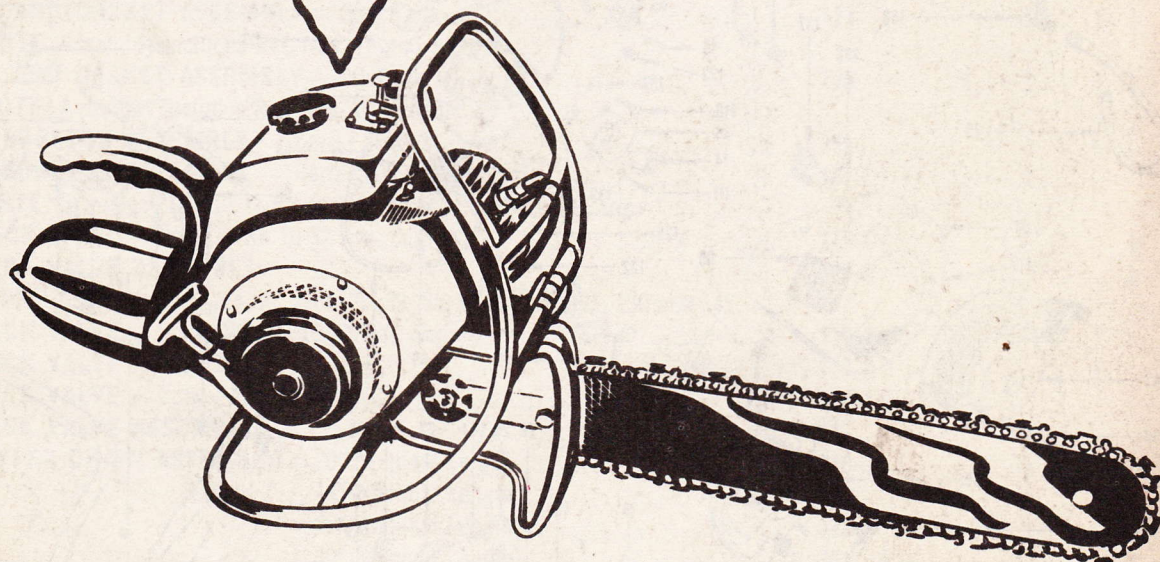


ILLUSTRATED
PARTS LIST
FOR THE MODEL 3A
Clinton Chain Saw
AND ACCESSORIES

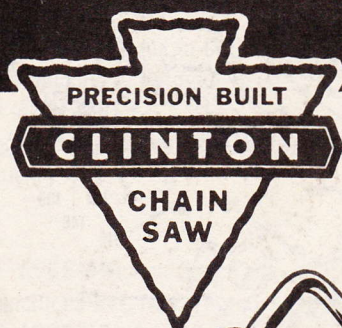


MODEL 3A

CHAIN SAW DIVISION
CLINTON MACHINE COMPANY
CLINTON, MICHIGAN, U.S.A.

CLINTON 3A CHAIN SAW

Parts List - Figure No. 1

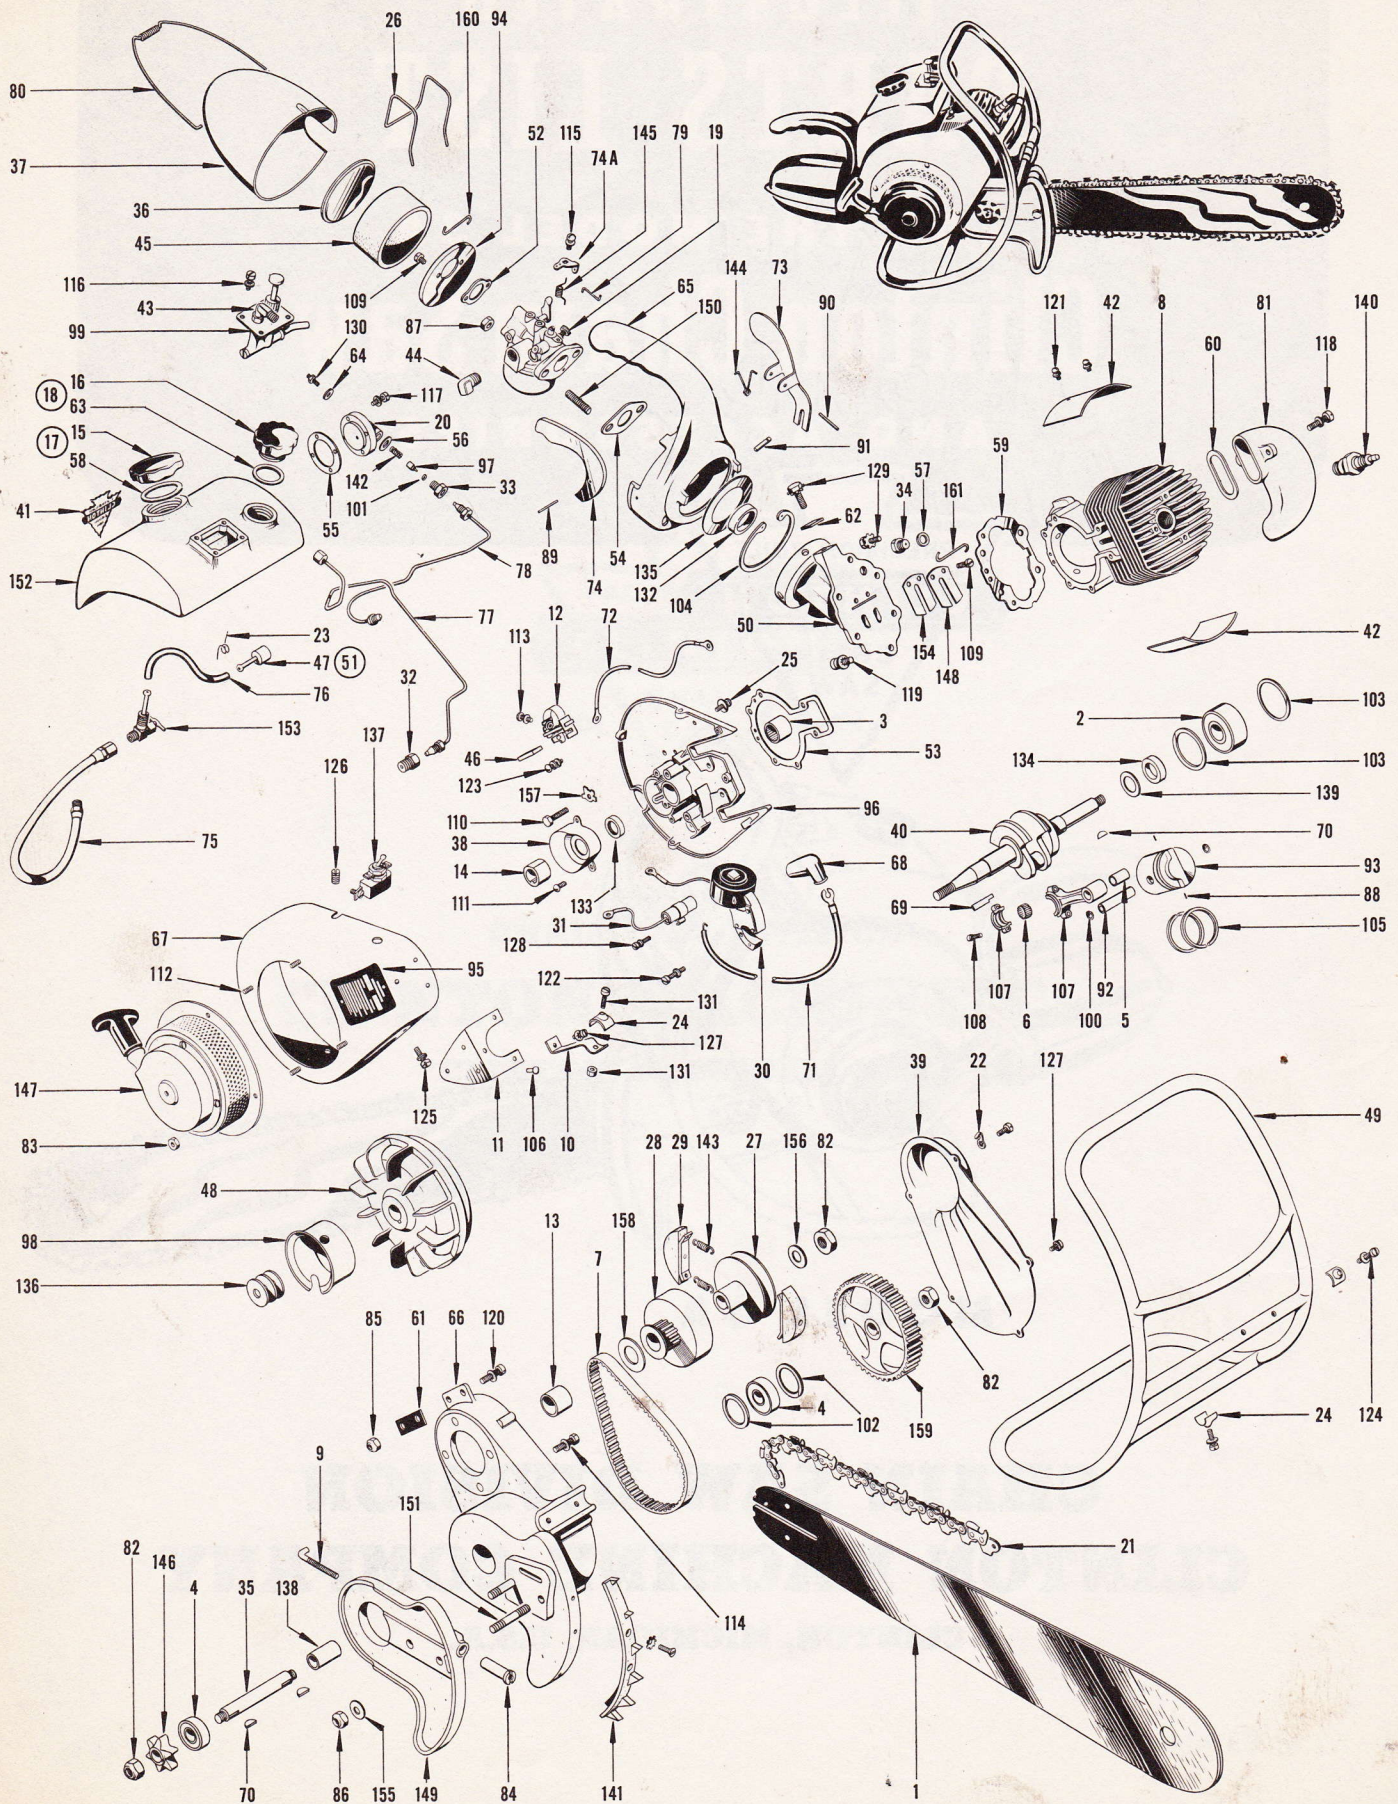

CLINTON 3A CHAIN SAW

PARTS LIST—ALL TYPES

Figure 1 Ref. No.	PART DESCRIPTION	PART NO. Prefixed by 3A	QUANTITY			
			Type 3A	1	2	3
1	BAR — Guide, Chipper Chain, 20" Length.....	217	1	1	1	1
	16" Length.....	477				
	26" Length.....	369				
	30" Length.....	360				
2	BEARING — Ball (Cylinder Block).....	233	1	1	1	1
3	BEARING — Needle (Bearing Plate).....	253	1	1	1	1
4	BEARING — Ball (Countershaft).....	196	2	2	2	2
5	BEARING — Sleeve, Wrist Pin (Connecting Rod).....	243	1	1	1	1
6	BEARING PIN — Roller (Crankshaft Connecting Rod).....	245	25	25	25	25
7	BELT — Driving (Gilmer).....	193	1	1	1	1
8	BLOCK ASSEMBLY — Cylinder.....	230	1	1	1	1
	NOTE: Assembly includes Ref. Nos.					
9	BOLT — Hook, Chain Tension.....	215	1	1	1	1
10	BRACKET — Tubular Frame (Frame to Cylinder Head).....	467			1	1
11	BRACKET — (Blower Housing to Cylinder Head).....	500				1
12	BREAKER POINTS ASSEMBLY.....	258	1	1	1	1
13	BUSHING — Clutch and Driver Assembly (Oilite) (Driver Cog Wheel).....	179	1	1	1	1
14	CAM — Breaker Point.....	266	1	1	1	1
15	CAP — Fuel Tank.....	103	1	1	1	1
16	CAP — Oil Tank.....	105	1	1	1	1
17	CAP AND GASKET ASSEMBLY — Fuel Tank.....	124	1	1	1	1
	NOTE: Assembly includes Ref. Nos. 15 and 58.					
18	CAP AND GASKET ASSEMBLY — Oil Tank.....	125	1	1	1	1
	NOTE: Assembly includes Ref. Nos. 16 and 63.					
19	CARBURETOR ASSEMBLY — (Carter 2060-S).....	355		1	1	1
	CARBURETOR ASSEMBLY — (Carter 2003-S).....	147	1			
	NOTE: See pages 10 and 11 for complete list of Carburetor Parts.					
20	CHECK VALVE — Body (With 10-32 Adj. Screw).....	116-C				1
	CHECK VALVE ASSEMBLY.....	127-C				1
	NOTE: Assembly includes Ref. Nos. 20, 33, 55, 56, 64, 97, 101, 130 and 142.					
	CHECK VALVE — Body (With 5/16-24 Adj. Screw).....	116-A			1	
	CHECK VALVE ASSEMBLY.....	127-A			1	
	CHECK VALVE — Body (Without Adj.).....	116		1		
	CHECK VALVE ASSEMBLY.....	127		1		
21	CHIPPER CHAIN ASSEMBLY — 20" Nominal Length.....	216	1	1	1	1
	16" Nominal Length.....	481				
	26" Nominal Length.....	370				
	30" Nominal Length.....	361				
22	CLAMP — Hold-Down (Oil Pressure Line).....	362	1	1	1	1
23	CLAMP — Suction Tube.....	341-A		2	2	2
24	CLAMP — Top and Bottom (Tubular Handle).....	201		3	4	4
	CLAMP — Bottom (Tubular Handle).....	520	1			
	CLAMP — Top (Tubular Handle).....	519	1			
25	CLAMP AND SCREW ASSEMBLY — Shorting Switch Lead.....	435	1	1	1	1
26	CLIP — Spring (Air Filter).....	169	1	1	1	1

TYPE NO.	SERIAL NOS.	TYPE NO.	SERIAL NOS.
3A 100	1 - 700	3A 2-100	1764 - 2132
3A 1-100	701 - 1764	3A 3-100	2133 - ON

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

CLINTON 3A CHAIN SAW

PARTS LIST — ALL TYPES Continued

Figure 1 Ref. No.	PART DESCRIPTION	PART NO. Prefixed by 3A	QUANTITY			
			Type 3A	1	2	3
27	CLUTCH — Body	183	1	1	1	1
	CLUTCH ASSEMBLY	489	1	1	1	1
	NOTE: Assembly includes Ref. Nos. 27, 28, 29 and 143.					
28	CLUTCH DRUM — Belt Drive	182	1	1	1	1
29	CLUTCH SHOE — Composition	372	2	2	2	2
30	COIL ASSEMBLY — (With Iron Assembly)	254	1	1	1	1
	COIL — Magneto (Without Iron Assembly)	513	1	1	1	1
31	CONDENSER	261	1	1	1	1
32	CONNECTOR — Oil Line (Reduction Housing Flange)	206	1	1	1	1
33	CONNECTOR — Pressure Line (Check Valve)	399	1	1	1	1
34	CONNECTOR — Pressure Line (Fuel Induction Manifold)	337	1	1	1	1
35	COUNTERSHAFT	173	1	1	1	1
36	COVER — Air Cleaner	166	1	1	1	1
37	COVER — B'Nose (Carburetor)	357		1	1	1
	COVER — B'Nose Assembly (Carburetor)	154	1			
38	COVER — Breaker Points	267	1	1	1	1
39	COVER — Reduction Housing	190	1	1	1	1
40	CRANKSHAFT	377	1	1	1	1
41	DECAL — Arrowhead, Trademark (Fuel Tank)	115	1	1	1	1
42	DEFLECTOR — Air, Cylinder	286	2	2	2	2
43	ELBOW — Close Ell, 1/4-28 x 5/16-18 (Oil Pump)	128	1	1	1	1
44	ELBOW — 90°, Fuel Line	170	1	1	1	1
45	ELEMENT — Filter (Air Cleaner)	164	1	1	1	1
46	FELT — Lubrication, Cam Follower	259	1	1	1	1
47	FILTER — Internal, Fuel Tank	130	1	1	1	1
48	FLYWHEEL ASSEMBLY	270	1	1	1	1
49	FRAME ASSEMBLY — Tubular Handling	200-B			1	1
	FRAME ASSEMBLY — Tubular Handling	200-A		1		
	FRAME ASSEMBLY — Tubular Handling	200	1			
50	FUEL INDUCTION MANIFOLD AND REED PLATE — (With 1/4-28 Hole) ..	134-A		1	1	1
	FUEL INDUCTION MANIFOLD AND REED PLATE — (With 1/8 Pipe Plug) ..	134	1			
51	FUEL LINE AND FILTER ASSEMBLY — Internal, Fuel Tank	340		1	1	1
	NOTE: Assembly includes Ref. Nos. 23, 47 and 76.					
52	GASKET — Air Cleaner Mounting Plate	158-A		1	1	1
	GASKET — Air Cleaner Mounting Plate	158	1			
53	GASKET — Bearing Plate to Block	248	1	1	1	1
	NOTE: Gaskets may be ordered in the following thicknesses: .025 and .035. Use part number and designate thickness.					
54	GASKET — Carburetor	153	1	1	1	1
55	GASKET — Check Valve Body to Oil Tank	119		1	1	1
56	GASKET — Connector to Check Valve	395		1	1	1
57	GASKET — Connector to Induction Manifold and Oil Pump	293	1	2	2	2
58	GASKET — Fuel Tank Cap	104	1	1	1	1
59	GASKET — Induction Manifold	137	1	1	1	1
60	GASKET — Muffler to Block	291	1	1	1	1
61	GASKET — Neoprene, Fuel Tank Mount, Flange	433		1	1	1
62	GASKET — Neoprene, Fuel Tank Mount, Lug	432		1	1	1

TYPE NO.	SERIAL NOS.	TYPE NO.	SERIAL NOS.
3A 100	1 - 700	3A 2-100	1764 - 2132
3A 1-100	701 - 1764	3A 3-100	2133 - ON

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

CLINTON 3A CHAIN SAW

PARTS LIST — ALL TYPES Continued

Figure 1 Ref. No.	PART DESCRIPTION	PART NO. Prefixed by 3A	QUANTITY			
			Type 3A	1	2	3
63	GASKET — Oil Tank Cap.....	106	1	1	1	1
64	GASKET — Set Screw Lock Nut (Check Valve).....	510			1	1
65	HAND GRIP.....	142	1	1	1	1
	HAND GRIP ASSEMBLY.....	141	1	1	1	1
	NOTE: Assembly includes Ref. Nos. 65, 73, 74, 89, 90, 91, 104, 132, 135, 144 and 150.					
66	HOUSING — Reduction.....	176-A		1	1	1
	HOUSING — Reduction.....	176	1			
67	HOUSING ASSEMBLY — Blower.....	276-A				1
	HOUSING ASSEMBLY — Blower.....	276	1	1	1	
68	INSULATOR — Spark Plug (Seal Tight).....	346	1	1	1	1
69	KEY — Flywheel.....	269	1	1	1	1
70	KEY — Woodruff (1—Clutch to Crankshaft, 2—Countershaft).....	184	3	3	3	3
71	LEAD — Magneto High Tension.....	256	1	1	1	1
72	LEAD — Shorting Switch to Breaker Points.....	379	1	1	1	1
73	LEVER — Index (Carburetor Positioning Device).....	160	1	1	1	1
74	LEVER — Throttle Speed Control.....	152	1	1	1	1
74A	LEVER — Carburetor Throttle.....	358		1	1	1
	LEVER — Carburetor Throttle.....	148	1			
75	LINE — Fuel, Flexible.....	171	1	1	1	1
76	LINE — Fuel, Internal Suction.....	131	1	1	1	1
77	LINE — Oil (Pump to Guide Bar).....	342	1	1	1	1
78	LINE — Pressure (Fuel Induction Manifold to Check Valve).....	338		1	1	1
79	LINK — Throttle.....	454		1	1	1
	LINK — Throttle.....	151	1			
80	LOCK — Bail Hook Snap (B'Nose Cover).....	544		1	1	1
81	MUFFLER — Exhaust.....	290	1	1	1	1
82	NUT — Hexagon, 7/16-20 (ESNA) (1—Clutch, 2—Countershaft).....	185	3	3	3	3
83	NUT — Hexagon, Lock, 10-32 (Blower Housing to Recoil Starter).....	281	4	4	4	4
84	NUT — Hook Bolt (Chain Tension).....	214	1	1	1	1
85	NUT — Jamb, 1/4-20 (ESNA) (Tank to Reduction Housing).....	132		2	2	2
86	NUT — Jamb, 3/8-24 (ESNA) (Guide Bar).....	218	2	2	2	2
87	NUT AND LOCKWASHER ASSEMBLY — Hexagon, Gripco, 1/4-28 (Carburetor Studs).....	145	2	2	2	2
88	PIN — Drive, Piston (Ring Retainer).....	238	2	2	2	2
89	PIN — Rol, 1/8 x 1 (Throttle, Speed Control).....	159	1	1	1	1
	PIN — Hand Grip Travel Limit (Not Illustrated).....	392	1			
90	PIN — 1/8 x 7/8 (Rol-Pin) (Index Lever Hinge).....	162	1	1	1	1
91	PIN — Slide, Index Lever (Position Lock).....	163	1	1	1	1
92	PIN — Wrist.....	240	1	1	1	1
93	PISTON — Standard.....	237	1	1	1	1
	PISTON ASSEMBLY.....	236	1	1	1	1
	NOTE: Assembly includes Ref. Nos. 88, 92, 100 and 105.					
94	PLATE — Air Cleaner Mounting (Carter 2060-S).....	356		1	1	1
	PLATE — Air Cleaner Mounting (Carter 2003-S).....	165	1			
95	PLATE — Name, "Clinton Chain Saw".....	304		1	1	1

TYPE NO.	SERIAL NOS.	TYPE NO.	SERIAL NOS.
3A 100	1 - 700	3A 2-100	1764 - 2132
3A 1-100	701 - 1764	3A 3-100	2133 - ON

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

CLINTON 3A CHAIN SAW

PARTS LIST — ALL TYPES Continued

Figure 1
Ref. No.

PART DESCRIPTION		PART NO. Prefixed by 3A	QUANTITY Type 3A 1 2 3			
96	PLATE ASSEMBLY — Bearing.....	251	1	1	1	1
	NOTE: Assembly includes Ref. Nos. 3 and 133.					
	PLATE — Bearing Magneto Assembly.....	249	1	1	1	1
	PLUG — Snap Button (Blower Housing) (Not Illustrated).....	434		1	1	
97	PLUNGER — Check Valve.....	396		1	1	1
98	PULLEY — Starter.....	273	1	1	1	1
99	PUMP ASSEMBLY — Oil.....	126	1	1	1	1
100	RETAINER — Wrist Pin.....	376	2	2	2	2
101	RING — "O" (Plunger Check Valve).....	397		1	1	1
102	RING — Retaining (Spirolox) (Countershaft, Belt-side).....	195	2	2	2	2
103	RING — Retaining (Spirolox) (Crankshaft, Power Take-Off Side).....	234	2	2	2	2
104	RING — Retaining (Tru-Arc #5002-300).....	146	1	1	1	1
105	RING SET — Piston.....	239	1	1	1	1
	NOTE: When oversize parts are required, order standard part number and specify oversize desired. Oversizes available are .005, .010 and .020.					
106	RIVET — O.H., 1/8 x 3/16 (2—Name Plate, *3—Blower Housing Bracket).....	366	2	2	2	5
	*—Used in Model 3A 3-100 only.					
107	ROD ASSEMBLY — Connecting.....	241	1	1	1	1
	NOTE: Assembly includes Ref. Nos. 5, 6 and 108.					
108	SCREW — Allen Head, 10-24 x 3/4 (Rod Cap to Connecting Rod).....	244	2	2	2	2
109	SCREW — F.H. w/wire hole, 8-32 x 5/16 (2—Reed to Plate, 2—Air Cleaner Mounting Plate) (Replaces Screw and Lockwasher Assembly 3A-109, 3A-167 previous Models).....	374	4	4	4	4
110	SCREW — H.H.C., 1/4-20 x 3/4 (Bearing Plate to Cylinder Block).....	138	6	6	6	6
111	SCREW — O.H.S.T., 6-3/8 (Breaker Points Cover to Bearing Plate).....	268	2	2	2	2
112	SCREW — Projection Weld, 10-32 (Blower Housing to Recoil Starter).....	278	4	4	4	4
113	SCREW — R.H.S.T., 6-32 x 3/8 (Condenser Lead to Point Assembly).....	263	1	1	1	1
114	SCREW AND LOCKWASHER ASSEMBLY — H.H.C., 5/16 x 18 x 1 (Reduction Housing to Block).....	186	3	4	4	4
	SCREW AND LOCKWASHER ASSEMBLY — F.H., 5/16 x 18 x 1 (Reduction Housing to Block).....	186-A	1			
115	SCREW AND LOCKWASHER ASSEMBLY — R.H., 6-32 x 1/4 (Throttle Lever).....	149	1	1	1	1
116	SCREW AND LOCKWASHER ASSEMBLY — F.H., 8-32 x 5/16 (Oil Pump to Tank).....	109	4	4	4	4
117	SCREW AND LOCKWASHER ASSEMBLY — F.H., 8-32 x 1/2 (Check Valve to Tank).....	120		4	4	4
118	SCREW AND LOCKWASHER ASSEMBLY — F.H., 1/4-20 x 3/4 w/split washer (Muffler to Block).....	114	2	2	2	2
119	SCREW AND LOCKWASHER ASSEMBLY — F.H., 1/4-20 x 3/4, Internal Shakeproof (5—Manifold to Block, *1—Tank to Reduction Housing).....	112	6	5	5	5
	*—Used in 3A 100 only, and replaces Hexagon Head on some models.					
120	SCREW AND LOCKWASHER ASSEMBLY — F.H., 1/4-20 x 1 (Tank Flange to Reduction Housing).....	363		2	2	2
121	SCREW AND LOCKWASHER ASSEMBLY — R.H.S.T., 8-32 x 3/8 (Deflector to Cylinder).....	287	4	4	4	4
122	SCREW AND LOCKWASHER ASSEMBLY — F.H.S.T., 10-24 x 1 (Iron Assembly Bearing Plate).....	255	2	2	2	2

TYPE NO.	SERIAL NOS.	TYPE NO.	SERIAL NOS.
3A 100	1 - 700	3A 2-100	1764 - 2132
3A 1-100	701 - 1764	3A 3-100	2133 - ON

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

CLINTON 3A CHAIN SAW

PARTS LIST — ALL TYPES Continued

Figure 1 Ref. No.	PART DESCRIPTION	PART NO. Prefixed by 3A	QUANTITY Type 3A 1 2 3			
123	SCREW AND LOCKWASHER ASSEMBLY — R.H.M., 8-32 x 5/16 (Point Assembly to Bearing Plate).....	260	1	1	1	1
124	SCREW AND LOCKWASHER ASSEMBLY — R.H., 1/4-20 x 1 1/4 (Tubular Handle).....	202	6	3	3	3
125	SCREW AND LOCKWASHER ASSEMBLY — F.H., 1/4-20 x 1/2 (Blower Housing to Bearing Plate).....	279	4	4	4	3
126	SCREW — Headless Set, 1/4-20 x 1/2 (Nylon Lock) (Blower Housing to Bearing Plate).....	539				1
127	SCREW AND LOCKWASHER ASSEMBLY — F.H., 10-24 x 1/2 (5—Reduction Housing Cover, *3—Blower Housing Bracket to Cylinder Head)..... *—Used in Model 3A 3-100 only.	191	5	5	5	8
128	SCREW AND LOCKWASHER ASSEMBLY — F.H., 8-32 x 9/16 (Condenser to Bearing Plate).....	262	1	1	1	1
129	SCREW AND LOCKWASHER ASSEMBLY — H.H., 1/4-20 x 3/4 (1—Tank to Fuel Induction Manifold Lug, 1—Induction Manifold to Block).....	138	2	2	2	2
130	SCREW AND JAMB NUT ASSEMBLY — Headless Set Screw, 10-32 x 5/8 (Check Valve).....	508-A			1	1
131	SCREW AND LOCK NUT ASSEMBLY — F.H., 1/4-20 x 1 1/4 w/stop nut (Tubular Handle to Bracket).....	202-A		1	1	1
132	SEAL — Closure (Hand Grip to Induction Manifold Assembly).....	143	1	1	1	1
133	SEAL — Oil (Bearing Plate).....	257	1	1	1	1
134	SEAL — Oil, Crankshaft, Power Take-Off.....	247	1	1	1	1
135	SHIM — Hand Grip to Induction Manifold Assembly, 2 x 3 x .002 or .005.....	413	As Required			
	SHIM — Clutch to Crankshaft Assembly, 5/8 x 1 x .005 or .010.....	410	As Required			
	NOTE: Use part number when ordering and designate thickness.					
136	SHIM — Serrated Starter Nut.....	274	As Required			
137	SHORTING SWITCH ASSEMBLY.....	288	1	1	1	1
138	SLEEVE — Countershaft Spacer.....	174	1	1	1	1
139	SPACER — Oil Seal Ride (Crankshaft).....	296	1	1	1	1
140	SPARK PLUG AND GASKET ASSEMBLY.....	282	1	1	1	1
141	SPIKE BUMPER ASSEMBLY.....	368	1	1	1	1
	NOTE: Assembly includes (3) 10-24 x 1/2 Flat Head Screw and Lockwasher Assemblies.					
142	SPRING — Check Valve.....	398	1	1	1	1
143	SPRING — Clutch Shoe Retaining.....	373	2	2	2	2
144	SPRING — Index Lever (Carburetor Positioning).....	161	1	1	1	1
145	SPRING — Throttle Control, Left Hand Spring.....	354	1	1	1	
	SPRING — Throttle Control, Right Hand Spring.....	292	1			
146	SPROCKET — Saw Chain Drive.....	197	1	1	1	1
147	STARTER ASSEMBLY — Recoil (Schnacke).....	280	1	1	1	1
148	STOP — Reed Valve.....	136	1	1	1	1
149	STRUT — Guide Bar Installation.....	213-A		1	1	1
	STRUT ASSEMBLY — Guide Bar Installation.....	212-A		1	1	1
	NOTE: Assembly includes Ref. Nos. 9, 84 and 149.					
	STRUT — Guide Bar Installation.....	213	1			
	STRUT ASSEMBLY — Guide Bar Installation.....	212	1			
	NOTE: Assembly includes Ref. Nos. 9, 84 and 149.					

TYPE NO.	SERIAL NOS.	TYPE NO.	SERIAL NOS.
3A 100	1 - 700	3A 2-100	1764 - 2132
3A 1-100	701 - 1764	3A 3-100	2133 - ON

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

CLINTON 3A CHAIN SAW


PARTS LIST — ALL TYPES Continued

Figure 1
Ref. No.

Ref. No.	PART DESCRIPTION	PART NO. Prefixed by 3A	QUANTITY			
			Type 3A	1	2	3
150	STUD — Carburetor.....	144	2	2	2	2
151	STUD — Guide Bar.....	175	2	2	2	2
152	TANK — Fuel and Oil (Flange Mounting).....	102-A	1	1	1	
	TANK ASSEMBLY — Fuel and Oil.....	101-A	1	1	1	
	NOTE: Assembly includes Ref. Nos. 17, 18, 41, 51, 152 and 153.					
	TANK — Fuel and Oil (Saddle Mounting).....	102	1			
	TANK ASSEMBLY — Fuel and Oil.....	101	1			
153	VALVE — Fuel, Shut-Off.....	129		1	1	1
	VALVE — Fuel, Shut-Off.....	351	1			
154	VALVE — Reed.....	135	1	1	1	1
155	WASHER — Flat, 13/32 x 13/16 x 1/16 (Guide Bar to Strut).....	507				2
156	WASHER — Flat, 7/16 I.D. x 15/16 O.D. x 1/16 (Crankshaft, Power Take-Off Side).....	402		1	1	1
157	WASHER — Tab Type (Bearing Plate to Block).....	265	6	6	6	6
158	WASHER — Thrust.....	177	1	1	1	1
159	WHEEL — Cog, Countershaft Drive.....	194	1	1	1	1
160	WIRE — Lock (Air Cleaner Mounting Plate).....	514	1	1	1	1
161	WIRE — Lock (Reed Valve to Plate).....	297	1	1	1	1

TYPE NO.	SERIAL NOS.	TYPE NO.	SERIAL NOS.
3A 100	1 - 700	3A 2-100	1764 - 2132
3A 1-100	701 - 1764	3A 3-100	2133 - ON


NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

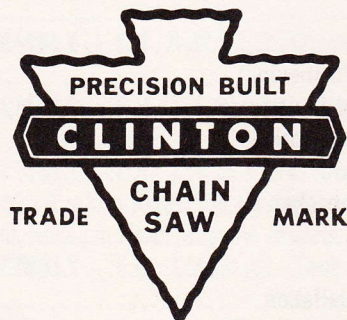

CLINTON CHAIN SAW - RECOIL STARTER

PARTS LIST - ACCESSORIES

Recoil Starter Part No.	Description	Chain Saw
3A-280	Schnacke Type	3A 3-100

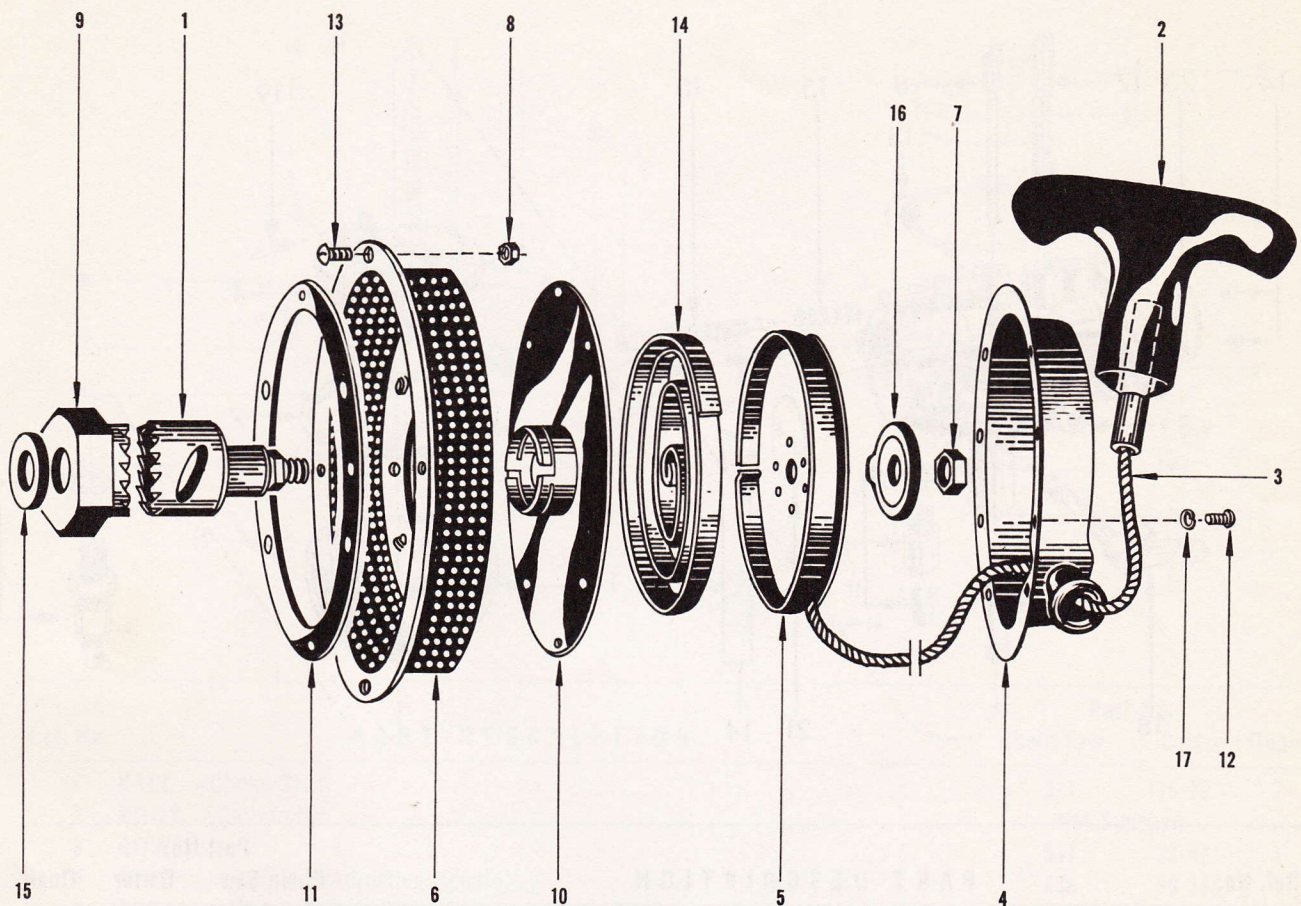


Ref. No.	PART DESCRIPTION	Part Number	
		Chain Saw	Schnacke
1	AXLE, CLUTCH AND PIN ASSEMBLY.....	424	1150-19A
2	CABLE, HANDLE AND ANTI-FRAY TUBE ASSEMBLY.....	427	1150-22
3	CABLE — Wire — 48" long.....	400	1150-6
4	COVER — Cable Sheave — Assembly.....	415	1150-7A
5	SHEAVE DRUM ASSEMBLY.....	430	1150-5
6	HOUSING — Starter.....	416	1150-8A
7	NUT — Hex. 5/16-24 (Axle and Clutch Assembly).....	421	1150-14
8	NUT — Hex. Lock #10-32.....	281	
9	NUT — Driven Member.....	391	7-20-75
10	PLATE AND BUSHING ASSEMBLY — Mounting.....	423	1150-17
11	RING — Retaining, Recoil Assembly.....	422	1150-15
12	SCREW — 10-32 x 3/8 (Recoil Assembly to Starter Housing).....	428	
13	SCREW — 10-32 x 5/16 (Recoil Starter to Engine).....	278	
14	SPRING — Recoil.....	390	1150-4
15	SHIM — Recoil Starter Nut.....	274	
16	WASHER — Cable Clamp.....	425	1150-20A
17	WASHER — No. 10 Lock.....	428	

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

CLINTON CHAIN SAW - CARBURETOR

PARTS LIST - ACCESSORIES

Carburetor Part No.	Carter Part No.	Rebuild Kit	Clinton Chain Saw
3A-147	N-2003S	Not Available	Type 3A

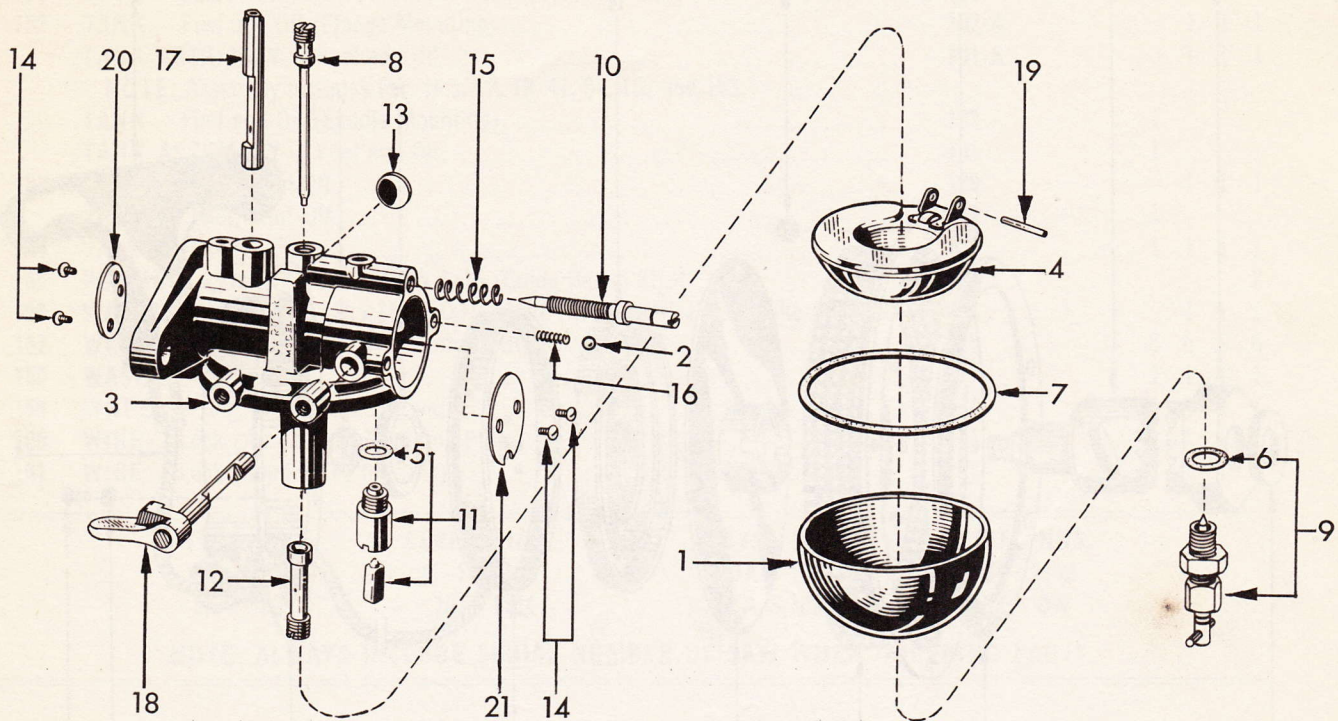


Ref. No.	PART DESCRIPTION	Part No.		
		Chain Saw	Carter	Quan.
1	BOWL.....	310	23-37	1
2	BALL — Choke Shaft.....	311	116-16	1
3	BODY — Carburetor.....	Not Supplied		
4	FLOAT AND LEVER ASSEMBLY.....	312	21-105S	1
5	GASKET — Needle Seat.....	313	20-22	1
6	GASKET — Bowl Nut.....	314	20-110	1
7	GASKET — Bowl.....	315	23A-19	1
8	JET ASSEMBLY — Low Speed.....	316	11-203S	1
9	NEEDLE ASSEMBLY — Main Adjustment.....	317	159-158S	1
10	NEEDLE — Idle Adjusting.....	318	30A-55	1
11	NEEDLE AND SEAT ASSEMBLY.....	319	25-33S	1
12	NOZZLE ASSEMBLY — Main.....	320	12-398	1
13	PLUG — Expansion.....	321	47-11	1
14	SCREW — Valve Attaching.....	322	101-320	4
15	SPRING — Idle Adjustment.....	323	61-475	1
16	SPRING — Choke Shaft.....	324	61-369	1
17	SHAFT — Throttle.....	325	3-808	1
18	SHAFT AND LEVER ASSEMBLY — Choke.....	326	14-450S	1
19	SHAFT — Float.....	327	24-23	1
20	VALVE — Throttle.....	328	2-139	1
21	VALVE — Choke.....	329	7-152	1

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

CLINTON CHAIN SAW - CARBURETOR


PARTS LIST - ACCESSORIES

Carburetor Part No.	Carter Part No.	Rebuild Kit	Clinton Chain Saw
3A-355	N2060S	Not Available	Types 1, 2, 3

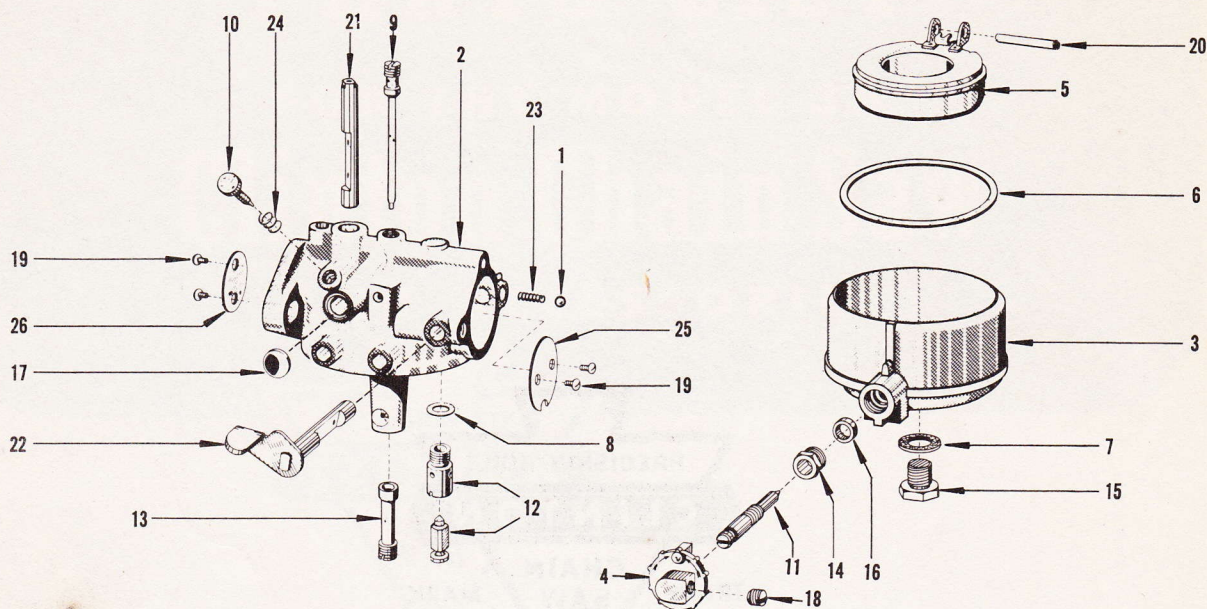

Ref. No.	PART DESCRIPTION	Part No.		
		Chain Saw	Carter	Quan.
1	BALL — Choke Shaft.....	311	116-16	2
2	BODY — Carburetor.....	Not Supplied		
3	BOWL.....	531	23-47	1
4	DIAL — High Speed Adjusting Needle.....	533	96-26S	1
5	FLOAT AND LEVER ASSEMBLY.....	530	21-139S	1
6	GASKET — Bowl.....	315	23A-19	1
7	GASKET — Bowl Nut.....	537	20-110	1
8	GASKET — Needle Seat.....	313	20-22	1
9	JET ASSEMBLY — Low Speed.....	522	11-218S	1
10	NEEDLE — Idle Adjusting.....	524	30A-46	1
11	NEEDLE — Main Adjustment.....	535	37-53	1
12	NEEDLE AND SEAT ASSEMBLY.....	529	25-219S	1
13	NOZZLE ASSEMBLY — Main.....	528	12-389	1
14	NUT — Packing, Main Needle.....	536	15A-12	1
15	NUT ASSEMBLY — Bowl.....	561	15-50S	1
16	PACKING — High Speed Adjusting Needle.....	518	163-53	1
17	PLUG — Expansion.....	321	47-11	1
18	SCREW — Slot Head, Adjusting Dial.....	534	101-344	1
19	SCREW — Valve Attaching.....	322	101-320	4
20	SHAFT — Float.....	327	24-23	1
21	SHAFT — Throttle.....	523	3-833	1
22	SHAFT AND LEVER ASSEMBLY — Choke.....	527	14-463S	1
23	SPRING — Choke Shaft.....	324	61-369	1
24	SPRING — Idle Adjustment.....	525	61-368	1
25	VALVE — Choke.....	329	7-152	1
26	VALVE — Throttle.....	526	2-160	1

NOTE: ALWAYS INCLUDE SERIAL NUMBER OF SAW WHEN ORDERING PARTS.

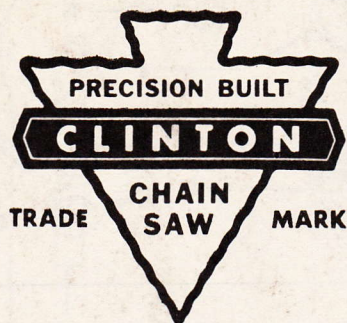

CHAIN SAW DIVISION
CLINTON MACHINE CO.
CLINTON, MICHIGAN, U.S.A.

SCOTT SUPPLY
Formerly SPORTCRAFT
358-5th STREET N. W.
NEW PHILADELPHIA, OHIO