


SEC. II, DIV. C-1100
PARTS CATALOG
Revised July, 1955
Supersedes Oct., 1953

CLINTON

S E R I E S
C-1100
4 - C Y C L E

BASIC
TYPES

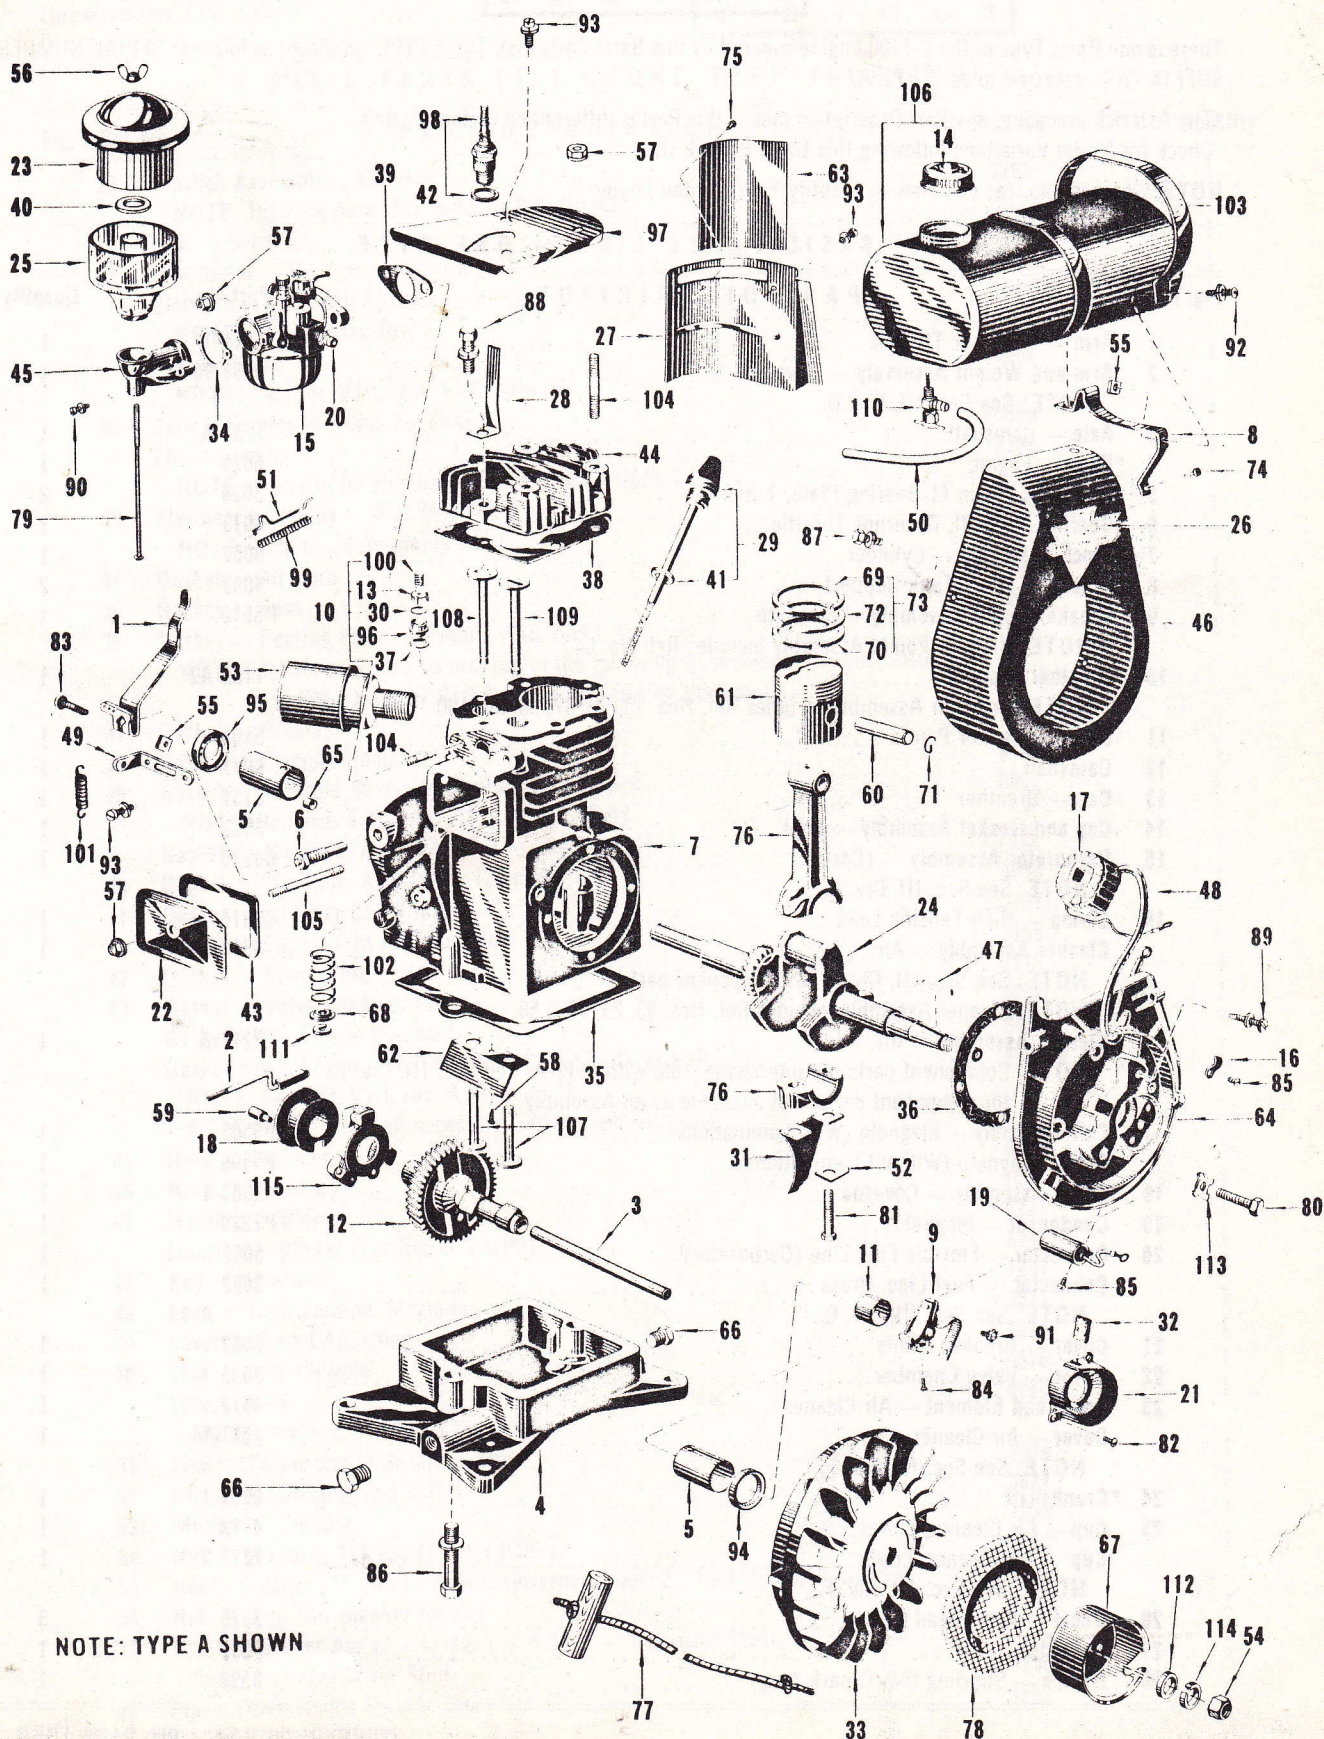

NOTE: TYPE A SHOWN

CLINTON**S E R I E S
C-1100
4 - C Y C L E****BASIC
TYPES****SEC. II, DIV. C-1100
PARTS CATALOG
Revised July, 1955
Supersedes Oct., 1953**

There is one Basic Type of the C-1100 Engine covered by this Basic Parts List. This "TYPE" is shown as follows: SERIAL NUMBER SUFFIX "A"—referred to as "TYPE A."


*The Asterick preceding any Part Description means this Part is different on certain models.
Check for Model Variations following this Basic Parts List.

NOTE: See page no. (a) on "How to Identify Your Clinton Engine."

BASIC PARTS LIST — ONE TYPE

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
1	Arm — Governor Throttle	3519-1	1
2	Arm and Weight Assembly — Governor	3067-78	1
	NOTE: See Sec. III, Div. D.		
3	Axle — Camshaft	3593-A	1
4	*Base — Engine	6025	1
5	*Bearing — Main (1-Bearing Plate, 1-Block)	3024	2
6	Bearing — Shaft, Governor Throttle	3073	1
7	*Block Assembly — Cylinder	6082	1
8	*Bracket — Fuel Tank Support	4092	2
9	Breaker Points Assembly — Magneto	P5510	1
	NOTE: Breaker Points Assembly includes Ref. No. 84.		
10	Breather Assembly	7150-A2	1
	NOTE: Breather Assembly includes Ref. Nos. 13, 30, 37, 96 and 100.		
11	Cam — Breaker Points	5105	1
12	Camshaft	6041	1
13	Cap — Breather	7151	1
14	Cap and Gasket Assembly — Fuel	3059	1
15	Carburetor Assembly — (Carter)	C6230	1
	NOTE: See Sec. III, Div. A.		
16	Clamp — High Tension Lead	C3410	1
	Cleaner Assembly — Air	4512-A	1
	NOTE: See Sec. III, Div. F, for component parts.		
	NOTE: Cleaner Assembly includes Ref. Nos. 23, 25, 40 & 56.		
	Cleaner Assembly — Air	7217-A	1
	NOTE: Component parts not interchangeable with 4512-A. See Sec. III, Div. F, for component parts. Not available as an Assembly.		
17	Coil Assembly — Magneto (With Laminations)	P5502	1
	Coil — Magneto (Without Laminations)	P5509	1
18	Collar Assembly — Governor	3063-1	1
19	Condenser — Magneto	P7219	1
20	Connector — Flexible Fuel Line (Carburetor)	5053	1
	Connector — Fuel Line, Brass	3562	1
	NOTE: See Sec. III, Div. G.		
21	Cover — Breaker Points	5062	1
22	Cover — Valve Chamber	3035	1
23	Cover and Element — Air Cleaner	4512	1
	Cover — Air Cleaner	7217-1	1
	NOTE: See Sec. III, Div. F.		
24	*Crankshaft	6059-1	1
25	Cup — Air Cleaner, Lower	4513	1
	Cup — Air Cleaner, Lower	7217-2	1
	NOTE: See Sec. III, Div. F.		
26	Decal — Arrowhead	3579	3
27	Deflector — Air	6032	1
28	Device — Shorting Clip (Spark Plug)	3599	1

CLINTON

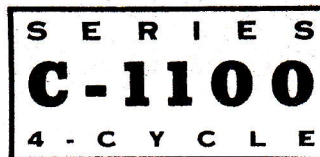

BASIC
TYPES

BASIC PARTS LIST — ONE TYPE (CONTINUED)

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
29	Dipstick Assembly — Oil Filler NOTE: Dipstick Assembly includes Ref. No. 41.	3295	1
30	Disc — Breather	7152	1
31	Distributor — Oil Element — Filter, Air Cleaner NOTE: See Sec. III, Div. F.	4007 7217-3	1 1
	Engine Repair Kit NOTE: See Sec. VIII, Div. A, Bulletin 57.	6308	1
32	Felt — Lubrication, Cam Follower Fin — Cooling NOTE: Fins can be eliminated by using 6002 Gasket.	P5504 3134	1 3
33	Flywheel Assembly — With Magnets NOTE: Sold as an Assembly only.	6222	1
34	Gasket — Air Horn	3990	1
35	Gasket — Base	6031	1
36	Gasket — Bearing Plate (Standard, .015 thick) NOTE: Gasket may also be ordered in the following thicknesses: — .005, .010 and .020. Order by Part Number and specify thickness.	3056	1
37	Gasket — Breather	7153	1
38	Gasket — Cylinder Head	6141	1
39	Gasket — Manifold, Asbestos (Carburetor to Block) NOTE: Replaces Fins and 7149 & 7168 Gaskets. Gasket — Manifold, Asbestos (Fins to Block)	6002 7149	1 1
40	Gasket — "O" Ring, Air Cleaner (Element to Cup)	4515	1
41	Gasket — Oil Filler Cap, Dipstick Gasket — Paper (Fins to Carburetor)	3297 7168	1 2
42	Gasket — Spark Plug	3115	1
43	Gasket — Valve Chamber Cover Gasket Kit — Engine Overhaul Gasket Kit — Engine Overhaul (With Speed Reducer Unit) NOTE: See Sec. VIII, Div. A, Bulletin 48. NOTE: Kit contains all necessary Gaskets and Oil Seals.	3057 6031-A 6031-B	1 1 1
44	Head — Cylinder	6140	1
45	Horn — Air Cleaner	3991	1
46	Housing — Blower Housing — Blower (For Recoil Starter)	6223 6240-G	1 1
47	Key — Flywheel	7244	1
48	Lead — High Tension, Magneto	P5521	1
49	Lever — Speed Adjusting	3075	1
50	Line — Fuel, Flexible Line — Fuel NOTE: See Sec. III, Div. G.	6316 4091	1 1
51	Link — Carburetor to Governor Arm	3074	1
52	Lock — Connecting Rod Screw	3027	2
53	Muffler — Tubular	3639	1
54	Nut — Hexagon, 7/16-20 (Starter Pulley)	3250	1
55	Nut — Square, #10-24 (1 — Arm to Governor Lever, 2 — Tank Straps to Bracket)	3253	3
56	Nut — Wing (Air Cleaner Screw)	7044	1
57	Nut & L'washer Ass'y — Hexagon, 1/4-28 (2 — Carburetor Studs, 2 — Straps to Head, 1 — Valve Cover Stud)	3255-A	5
58	Pin — Drive (Baffle Plate to Block)	3569	1

CLINTON

S	E	R	I	E	S
C-1100					
4	-	C	Y	C	L
E					

BASIC
TYPESSEC. II. DIV. C-1100
PARTS CATALOG
Revised July, 1955
Supersedes Oct., 1953

BASIC PARTS LIST — ONE TYPE (CONTINUED)

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
59	Pin — Retaining (Governor Yoke)	3656	1
60	Pin — Wrist	6024	1
61	Piston — Standard	6021	1
	Piston Assembly — Standard	6063	1
	NOTE: Piston Assemblies are also available in the following oversizes: .005, .010, .020, .030 and .040. Order by Part Number and specify oversize.		
	NOTE: Piston Assembly includes Ref. Nos. 60, 61, 71 and 73.		
62	Plate — Baffle, Crankcase	3559	1
63	Plate — Name, Clinton Engines	6530	1
64	Plate — Bearing	6220-A	1
	NOTE: Bearing Plate includes Ref. Nos. 5 and 94.		
	Plate Assembly — Bearing & Magneto	C6220-B	1
	NOTE: Bearing & Magneto Plate Assembly includes Ref. Nos. 9, 17, 19, 64, 85, 89 and 91.		
65	Plug — Camshaft Axle	3281	1
66	Plug — Oil Drain	3289	2
	NOTE: Replacement bases are equipped with 2 Oil Drain Plugs.		
67	Pulley — Starter	3299	1
68	Retainer — Valve Spring	3028	2
69	Ring — Compression, Standard	6026	1
70	Ring — Oil, Standard	6028	1
71	Ring — Retainer, Wrist Pin	6034	2
72	Ring — Scraper, Standard	6027	1
73	Ring Set — Standard	6106	1
	NOTE: Ring Sets are also available in the following oversizes: .005, .010, .020, .030 and .040. Order by Part Number and specify oversize.		
	NOTE: Ring Set includes Ref. Nos. 69, 70 and 72.		
74	Rivet — Tubular, 3/16 x 9/32 (Bracket to Blower Housing)	3619	2
75	Rivet — Tubular, Name Plate	3660	4
76	Rod Assembly — Connecting	6107	1
	NOTE: Rod Assembly includes Ref. Nos. 52 and 81.		
77	Rope Assembly — Starter	4266	1
78	Screen — Revolving	6226	1
79	Screw — F. H., #10-24 x 5-5/8 (Air Cleaner)	7249	1
80	Screw — H.H.C., 1/4-28 x 3/4 (Bearing Plate to Block)	5431	4
81	Screw — H.H.C., 1/4-28 x 1-1/4 (Connecting Rod Cap)	3235	2
82	Screw — O. H. S. T., #6-32 x 3/8 (Breaker Cover to Bearing Plate)	5416	2
83	Screw — R. H. M., #10-24 x 5/8 (Governor Throttle Arm)	3211	1
	NOTE: See Sec. III, Div. D.		
84	Screw — R. H. S. T., #6-32 x 3/8 (Breaker Points Terminal)	5405	1
85	Screw — R.H.S.T., #8-32 x 1/4 (1—Condenser to Plate, 1—Clamp to Plate)	5415	2
86	Screw & L'washer Ass'y — H.H.C., 7/16-20 x 2 (Base to Block)	6076-G	2
87	Screw & L'washer Ass'y — H.H.C., 1/4-20 x 1/2 (Blower Housing to Bearing Plate)	3205-G	4
88	Screw & L'washer Ass'y — H.H.C., 5/16-18 x 1-1/4 (Cylinder Head to Block)	6055-D	6
89	Screw & L'washer Ass'y — Pan H.S.T., 1/4-20 x 1 (Coil to Bearing Plate)	5406-B	2
90	Screw & L'washer Ass'y — R.H.M., #8-32 x 3/4 (Air Horn to Carburetor)	7113-G	2
91	Screw & L'washer Ass'y — R.H.M., #8-32 x 5/16 (Breaker Points to Bearing Plate)	5407-F	1
92	Screw & L'washer Ass'y — R.H.M., #10-24 x 1 (Fuel Tank Straps)	5421-A	2
93	Screw & L'washer Ass'y — R.H.M., #10-32 x 3/8 (1—Cylinder Head Shield, 2—Deflector to Head, 1—Speed Adjusting Lever)	3222-F	4
94	Seal — Oil (Bearing Plate)	3136	1

CLINTON



BASIC
TYPES

BASIC PARTS LIST — ONE TYPE (CONTINUED)

Fig. 1 Ref. No.	PART DESCRIPTION	Part No.	Quantity
95	Seal — Oil (Cylinder Block)	3026	1
96	Seat — Breather	7150	1
97	Shield — Cylinder Head	6139	1
98	Spark Plug and Gasket Assembly	3568	1
99	Spring — Backlash, Governor	3097	1
100	Spring — Breather Hold Down	7154	1
101	Spring — Governor	4001	1
102	Spring — Valve	3068-B	2
103	*Strap — Fuel Tank	4093	2
104	Stud — 1/4-28 x 1 (2—Carburetor to Block, 2—Cylinder Head)	6155	4
105	Stud — Valve Chamber Cover	3042	1
106	*Tank Assembly — Fuel	4090-A	1
NOTE: Tank Assembly includes Ref. No. 14.			
107	Tappet — Valve	3034	2
108	Valve — Exhaust, Standard Stem	3031-1	1
	Valve — Exhaust, Oversize Stem (Approx. 9/32 Dia.)	3031-2	1
109	Valve — Intake, Standard Stem	3032-1	1
	Valve — Intake, Oversize Stem (Approx. 9/32 Dia.)	3032-2	1
110	Valve — Fuel, Shut-Off, Flexible Line	5051	1
	Valve — Fuel, Shut-Off	5050	1
NOTE: See Sec. III, Div. G.			
111	Washer — "C", Valve Keeper	3291	2
112	Washer — Flat, 7/16 (Starter Pulley)	5482	1
113	Washer — Lock, Tab Type (Bearing Plate to Block)	7028	4
114	Washer — Lock, 7/16 (Starter Pulley)	3275	1
115	Weight Assembly — Governor Yoke	4205	1

AVAILABLE OVERHAUL KITS

Engine Model	Description	Kit No.
C-1100	Gasket Overhaul Kit	6031-A
*C-1100	Gasket Overhaul Kit	6031-B
All Types	Engine Repair Kit	6308
All Types	Carburetor Repair Kit (Carter)	C3964

*With Speed Reducer Units.

CLINTON

S E R I E S
C - 1100
4 - C Y C L E

MODEL
VARIATIONS

SEC. II, DIV. C-1100
PARTS CATALOG
Revised July, 1955
Supersedes Oct., 1953

MODEL VARIATIONS OF C-1100 SERIES

The adaptation of Clinton Engines to a wide variety of uses result in what is known as "Model Variations". Following is the complete list of all Models produced up to issue date (Shown above). Opposite each Engine Model listed are the Part Numbers and/or Assembly Numbers for the Series used IN ADDITION TO or IN PLACE OF the parts illustrated and shown on the Basic Parts List preceding this Model Variations List. Refer to other sections of this Manual when Assembly Numbers are given to find the Parts List for these assemblies. See page (a) on "How to Identify Your Clinton Engine". Use the preceding Basic Parts List except as shown below.

ENGINE MODEL—See Page (a), "How to Identify Your Clinton Engine"	BASE—ENGINE, (Part Numbers Shown) refer to Sec. IV, Div. A for details and further information.	BEARING—MAIN, (Part Numbers Shown) Refer to Illustrated Basic Parts List for location of corresponding part.	BLOCK ASSEMBLY—CYLINDER, (Parts Number Shown) refer to Illustrated Basic Parts List for corresponding part.	CONTROL GROUP, (Control Group Illustration Numbers Shown) refer to Sec. III, Div. D for Parts List.	CONTROL CABLE LENGTH, replacement cable is furnished in 72" length ONLY, cut to length shown.	CRANKSHAFT, (Part Numbers Shown) refer to Sec. IV, Div. B for details and further information.	FUEL SYSTEM, (Illustration Numbers Shown) Refer to Sec. III, Div. G for Parts List.	STARTER—KICK OR RECOIL, (Assembly Numbers Shown) refer to Sec. III, Div. C and Div. H for Parts Lists.	REDUCTION GEAR, (Assembly Numbers Shown) refer to Sec. III, Div. B for Parts List.	REDUCTION GEAR MOUNTING POSITION, "Clock" position shows mounting of reduction unit in relation to Crankshaft.
C-1100-1	5040		6060-1	SK-101-1	72"		SK-901			
C-1100-2	5040			SK-164-1	72"		SK-902			
C-1100-3				SK-101-1	72"					
C-1100-4									C6313	
C-1100-5	No Variation, use Basic Parts List.									
C-1100-6				SK-101-1	62"		SK-903			
C-1100-7	No Variation, use Basic Parts List.									
C-1100-8				SK-101-1	37"		SK-903			
C-1100-9				SK-101-1	62"		SK-902			
C-1100-10	5040						SK-901			
C-1100-11				SK-165-1						
C-1100-12				SK-165-1					C6313	
C-1100-13				SK-101-1	72"					
C-1100-14	Note 2 5040						SK-902			
C-1100-15				SK-101-1			SK-903			
C-1100-16				SK-101-1	72"		SK-903			
C-1100-17				SK-101-1	62"		SK-903			
C-1100-18	Note 3			SK-165-1			SK-903			
C-1100-19							SK-903			
C-1100-20				SK-101-1						
C-1100-21	5040						SK-904			
C-1100-22				SK-101-1						
C-1100-24				SK-101-1			SK-904			
C-1100-25	5040			SK-101-1	72"					
C-1100-26	5040									
C-1100-27				SK-101-1	43"		SK-903			
C-1100-28				SK-101-1	62"					
C-1100-29				SK-165-1			SK-903			
C-1100-30	5040									
C-1100-31	No Variation, use Basic Parts List.									
C-1100-32				SK-165-1	72"					
C-1100-33	5040									
C-1100-34				SK-165-1						
C-1100-35	No Variation, use Basic Parts List.									
C-1100-A	No Variation, use Basic Parts List.									

CLINTON

S E R I E S
C-1100
4 - C Y C L E

MODEL
VARIATIONS

MODEL VARIATIONS OF C-1100 SERIES (Cont.)

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Base-Eng.	Bearing	Blk. Assy.	Con. Grp.	Cable	Crank.	Fuel	Starter	Red. Gr.	Pos'n.
C-1100-A6A							SK-904			
C-1100-AOC	No Variation, use Basic Parts List.									
C-1100-AOD	No Variation, use Basic Parts List.									
C-1100-AOE	No Variation, use Basic Parts List.									
C-1100-AOF	No Variation, use Basic Parts List.									
C-1100-BOA	Note 5									
C-1100-BOB	No Variation, use Basic Parts List.									
C-1100-C4A	5040						SK-901			
C-1100-COA	5040									
C-1100-COC	5040									
C-1100-F							SK-901			
C-1100-GOA	5040	Notes 1 & 9						3720		
C-1100-M							SK-903			
C-1100-MRG						6049-1	SK-903		3800	6:00
C-1100-MS	6036-1						SK-903	3775		
C-1100-ZOA	5040									
C-1101-A2A				SK-101-1	72"		SK-903			
C-1101-A2B				SK-101-1			SK-903			
C-1101-A2C			6180	SK-101-1			SK-903			
C-1101-A2D				SK-101-1	26"		SK-903			
C-1101-A2E				SK-101-1			SK-903			
C-1101-A2F				SK-101-1			SK-903			
C-1101-AOA				SK-101-1						
C-1101-AOB				SK-101-1	24"					
C-1101-AOC				SK-101-1	72"					
C-1101-AOD	Note 5			SK-101-1						
C-1101-AOE				SK-101-1	36"					
C-1101-BOA				SK-101-1	72"					
C-1101-BOB				SK-101-1						
C-1101-C5A	5040		6060-A	SK-101-1			SK-901			
C-1101-C5B	5040			SK-101-1			SK-901			
C-1101-C5D	5040			SK-101-1						
C-1101-C6A	5040			SK-101-1	38"		SK-904			
C-1101-COB	5040			SK-101-1	72"					
C-1101-COC	5040			SK-101-1	72"					
C-1101-COD	5040			SK-101-1						
C-1101-COE	5040			SK-101-1						
C-1101-DOA	5040			SK-101-1						
C-1101-EOA	6036-1			SK-101-1	62"			3772		
C-1101-ZOA	5040			SK-101-1	72"					
C-1102-AOA	5040		6060-A	SK-165-1	72"					
C-1102-AOC				SK-165-1	72"					
C-1102-AOD				SK-165-1						
C-1102-B2A				SK-165-1	43"		SK-903			
C-1102-BOA				SK-165-1	43"		SK-903			
C-1102-COA	5040			SK-165-1	72"					
C-1102-D5A	5040			SK-165-1			SK-901			
C-1102-EOA	Notes 5 & 9			SK-165-1	40"			3720		
C-1104-COB	5040			SK-314-2						
C-1104-D3A	5040			SK-314-2	72"		SK-904			

CLINTON

S E R I E S
C - 1100
4 - C Y C L E

MODEL
VARIATIONSSEC. II, DIV. C-1100
PARTS CATALOG
Revised July, 1955
Supersedes Oct., 1953**MODEL VARIATIONS OF C-1100 SERIES (Cont.)**

For more complete description refer to first page of the Model Variations.

Eng. Mod.	Base-Eng.	Bearing	Blk. Assy.	Con. Grp.	Cable	Crank.	Fuel	Starter	Red. Gr.	Pos'tn.
C-1104-DOA	5040			SK-314-1						
C-1105-CIA	5040			SK-164-1			SK-902			
C-1106-A5C				SK-512-1	72"					
C-1106-AOC				SK-512-1	72"					
C-1120-AOA						6091-1			3552	6:00
C-1120-COA	5040					6091-1			3552	9:00
C-1130-ZOA			6180							
C-1141-AOA				SK-101-1		6089-1			3554	12:00
C-1160						6049-1			3800	12:00
C-1160-1				SK-165-1	72"	6049-1			3800	9:00
C-1160-2				SK-101-1	72"	6049-1			3800	6:00
C-1160-3						6049-1			3800	12:00
C-1160-4				SK-101-1	72"	6049-1			3800	9:00
C-1160-5			6149	SK-165-1	54"	6049-1	SK-902		3800	6:00
C-1160-6				SK-101-1	72"	6049-1			3800	6:00
C-1160-7				SK-101-1	72"	6049-1			3800	6:00
C-1160-8	Note 4			SK-101-1	72"	6049-1	SK-903		3800	9:00
C-1160-9				SK-101-1	72"	6049-1	SK-903		3800	12:00
C-1160-AOA						6049-1			3800	3:00
C-1160-AOB						6049-1			3800	6:00
C-1160-COA	5040					6049-1			3800	12:00
C-1160-COB	5040					6049-1				
C-1160-COC	5040					6049-1			3800	6:00
C-1161-A2A				SK-101-1	72"	6049-1	SK-903		3800	9:00
C-1161-AOA				SK-101-1	43"	6049-1			3800	6:00
C-1161-AOB				SK-101-1		6049-1			3800	3:00
C-1161-AOC				SK-101-1		6049-1			3800	6:00
C-1161-AOD				SK-101-1	72"	6049-1			3800	3:00
C-1161-AOE	Note 4			SK-101-1	72"	6049-1			3800	6:00
C-1161-C2A	5040			SK-101-1	72"	6049-1	SK-903			
C-1161-COA	5040			SK-101-1	72"	6049-1			3800	12:00
C-1161-COB	5040			SK-101-1		6049-1			3800	6:00
C-1161-COC	5040			SK-101-1		6049-1			3800	6:00
C-1162-AOA				SK-165-1	62"	6049-1			3800	6:00
C-1162-AOB				SK-165-1		6049-1			3800	6:00
C-1162-AOC				SK-165-1	54"	6049-1			3800	6:00
C-1162-COA	5040			SK-165-1	72"	6049-1			3800	9:00
C-1162-COB	5040			SK-165-1	54"	6049-1			3800	6:00
C-1164-AOA				SK-314-2	72"	6049-1			3800	6:00
C-1181-A2A	Note 6	3670	6133	SK-101-1	72"	6127-1	SK-903			
C-1190-1	Note 7	3670	6153				SK-903			
C-1190-AOA	Note 7	3670	6146			6059-4				
C-1190-AOE		6036-1	6153	Notes 7 & 9		6059-4		3775		
C-1190-AOF	Note 7	3670	6153			6059-4				
C-1190-AOG	Note 8	3670	6162			6059-4				
C-1190-B2A	Note 7	3670	6153			6059-4	SK-903		3800	
C-1191-B2A	Note 7	3670	6153	SK-101-1	72"	6059-4	SK-903			
C-1191-C5A	Note 8	3670	6151	SK-101-1		6059-4	SK-901			
C-1191-COA	Note 7	5040	6153	SK-101-1	72"	6059-4				
C-1192-AOB	Note 7	3670	6153	SK-165-1	72"	6059-4				
C-1197-C5A	Note 8	5040	6162	SK-513		6059-4	SK-901			

SEC. II, DIV. C-1100
PARTS CATALOG
Revised July, 1955
Supersedes Oct., 1953

CLINTON



MODEL
VARIATIONS

MODEL VARIATIONS OF C-1100 SERIES (Cont.)

- Note 1** Part No. C3475-Wire, shorting (60 inches long) used as additional part. Connects to Breaker Point terminal.
- Note 2** Speed Control Group consists of: 4001-Spring, governor; 3851-Clamp, cable; 3855-56-Lever, bracket and cable ass'y.
- Note 3** Special Tank and Cap Assembly supplied by manufacturer of original equipment used in place of 6067-Tank, fuel.
- Note 4** Part No. 3805-5-1-Shaft, gear reducer replaces standard shaft in 3817 gear and shaft assembly.
- Note 5** Part No. 4419-Elbow, street and 4425-Nut, grip used as additional parts between muffler and block.
- Note 6** Part No. 6129-Ring, snap and 6130-Seal, oil used in cylinder block.
- Note 7** Part No. 3669-Seal, oil replaces 3026-Seal, oil in cylinder block.
- Note 8** Part No. 6152-Seal, oil replaces 3026-Seal, oil in cylinder block.
- Note 9** Kickstarter Assembly 3720 and 3775 not available as assembly. Replace with C6313 Recoil Starter Assembly. See Sec. III, Div. H.